



# SolaXCloud App Operation Manual

Only for home user

V6.5.0

\*This manual is based on SolaXCloud App V6.3. The finally displayed pages should be subject to the actual situations.

## About This App

**SolaxCloud** APP supports iOS and Android operation system. It allows you to master your family energy devices easily.

You can also access the website [www.solaxcloud.com](http://www.solaxcloud.com) through a PC, to manage your family energy plant.



## Contents

Account & Security .....	1
Account Creation .....	1
Login .....	2
Forgot Password .....	3
Plant .....	4
Adding Plant .....	4
Plant Management .....	8
Single-plant Management .....	8
Setting Tariff .....	10
Setting Selling Tariff .....	10
Setting Buying Tariff .....	12
Network Configuration .....	12
Wi-Fi .....	13
4G .....	19
LAN .....	28
Homepage Introduction .....	32
Device .....	34
Device-related Operations .....	34
Device Details .....	35
Intelligence .....	36
Overview of Intelligence .....	36
Intelligent (TOU) .....	37
Automation Scenario .....	38
Recommended Scenario .....	38
Custom Scenario .....	39
Service .....	40



Warranty Management .....	40
Third-party Ecology .....	40
Email Subscription .....	40
Help Center .....	41
EV Charger .....	41
Local Mode .....	43
Login .....	44
Dongle .....	46
Wi-Fi Network Configuration .....	46
4G Network Configuration .....	49
Personal Settings .....	52



## Revision history

V6.5

Add Chapter Intelligence and moved Intelligent (TOU) from Chapter Device to Chapter Intelligence


V6.4

Updated TOU and deleted template creation

# Account & Security

## Account Creation

At the login page, tap **Sign up**, to create an account. Select a country or region, select the role of **End User**, complete sign-up information, and finally tap **Sign up**.

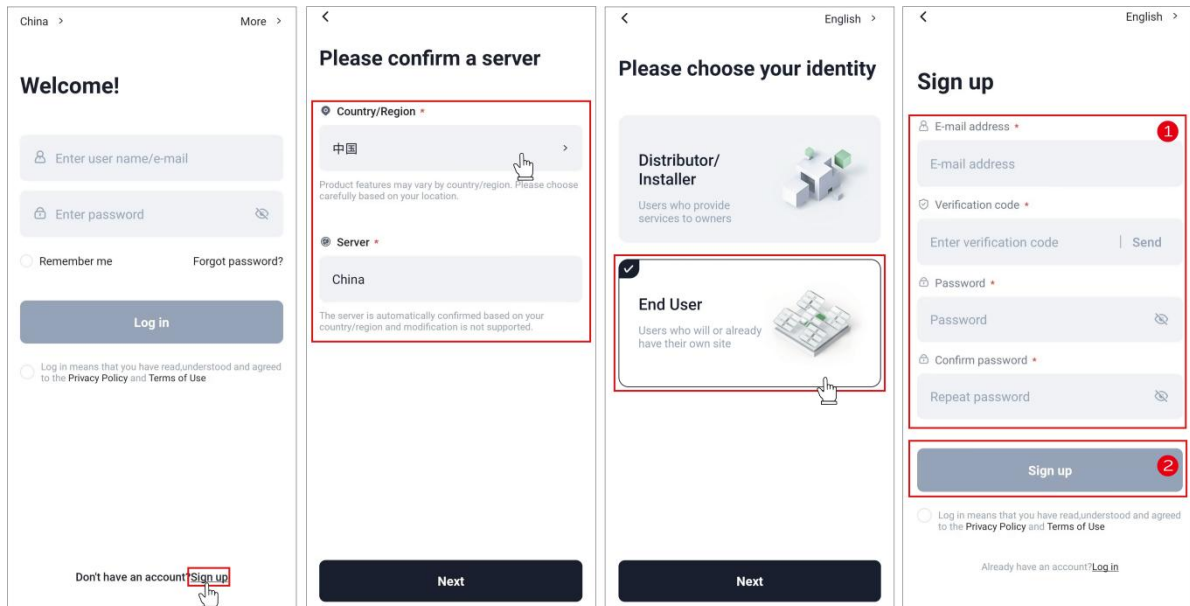


The account creation process consists of four steps:

- Welcome!** The user is prompted to enter their user name/e-mail and password. A **Sign up** link is located at the bottom right.
- Please confirm a server** The user selects a **Country/Region** (China) and a **Server** (China). A **Next** button is at the bottom.
- Please choose your identity** The user selects their role: **Distributor/Installer** or **End User**. A **Next** button is at the bottom.
- Sign up** The user enters their **E-mail address**, **Verification code**, **Password**, **Confirm password**, and **Repeat password**. A **Sign up** button is at the bottom.

# Login

Select your server, enter your account and password, tick to agree on **Privacy Policy** and **Terms of Use**, and finally tap **Log in**.

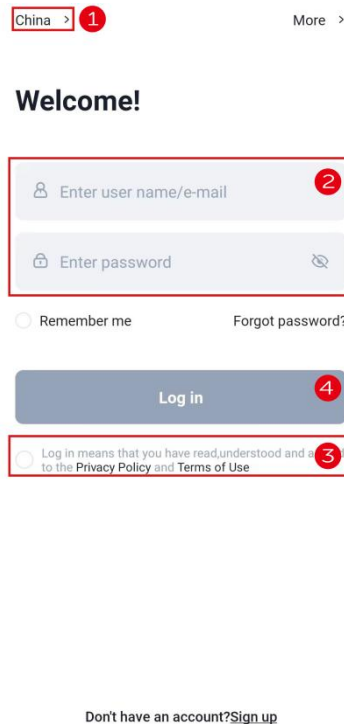

The login form interface includes the following elements:


- 1**: A dropdown menu for selecting a server, currently showing "China".
- 2**: A red box highlighting the input fields for "Enter user name/e-mail" and "Enter password".
- 3**: A checkbox labeled "Log in means that you have read, understood and agree to the Privacy Policy and Terms of Use".
- 4**: A blue "Log in" button.

Additional text in the form includes "Welcome!", "Remember me", "Forgot password?", and "Don't have an account? [Sign up](#)".

**Note:** If you consecutively enter the incorrect password **Five** times, the account will be forcibly locked for half an hour.

## Forgot Password

If forgetting the password, you can tap **Forgot password**, to re-set the password. Password resetting requires you to enter the verification code sent to your registered email, to authenticate your identity.

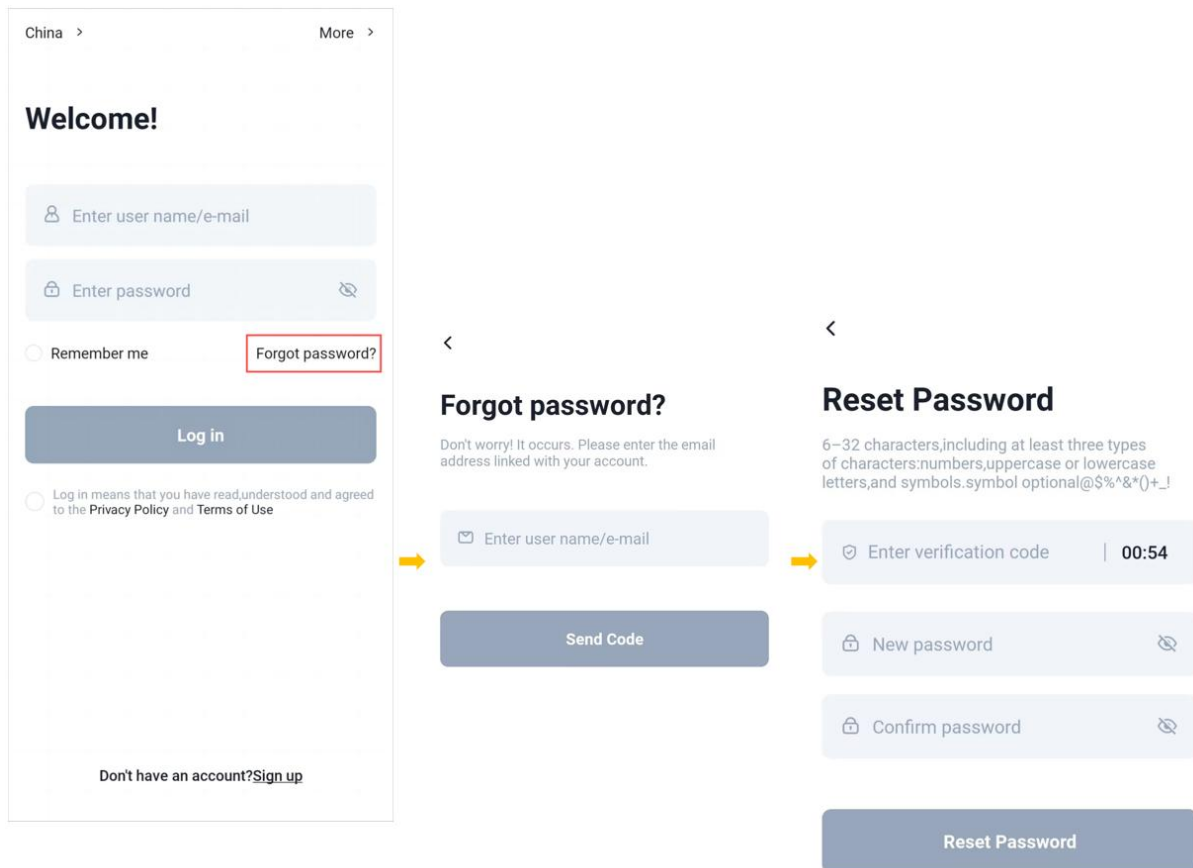

The flowchart illustrates the password reset process in three stages:

- Welcome! Login Screen:** This screen shows the login interface with fields for "Enter user name/e-mail" and "Enter password". A "Remember me" checkbox is present, and a "Forgot password?" link is highlighted with a red box. Below the login fields is a "Log in" button and a checkbox for "Log in means that you have read, understood and agreed to the Privacy Policy and Terms of Use". At the bottom, there is a link: "Don't have an account? Sign up".
- Forgot password? Screen:** This screen prompts the user to enter their email address. It includes a back arrow, a title "Forgot password?", a message "Don't worry! It occurs. Please enter the email address linked with your account.", an input field "Enter user name/e-mail", a "Send Code" button, and a yellow arrow pointing to the next screen.
- Reset Password Screen:** This screen guides the user through setting a new password. It includes a back arrow, a title "Reset Password", a password requirement message: "6-32 characters, including at least three types of characters: numbers, uppercase or lowercase letters, and symbols. symbol optional @\$%^&\*()+\_!.", an input field "Enter verification code" with a timer "00:54", input fields for "New password" and "Confirm password", and a "Reset Password" button. A yellow arrow points from the "Forgot password?" screen to this one.




# Plant


## Adding Plant

Step 1: Tap the icon “+” in the middle of the homepage, to add a plant (for users who add a plant for the first time).


Tap the icon “+” at the upper right corner of the homepage, to select **Add plant** from the drop-down menu (for users who have already added a plant).

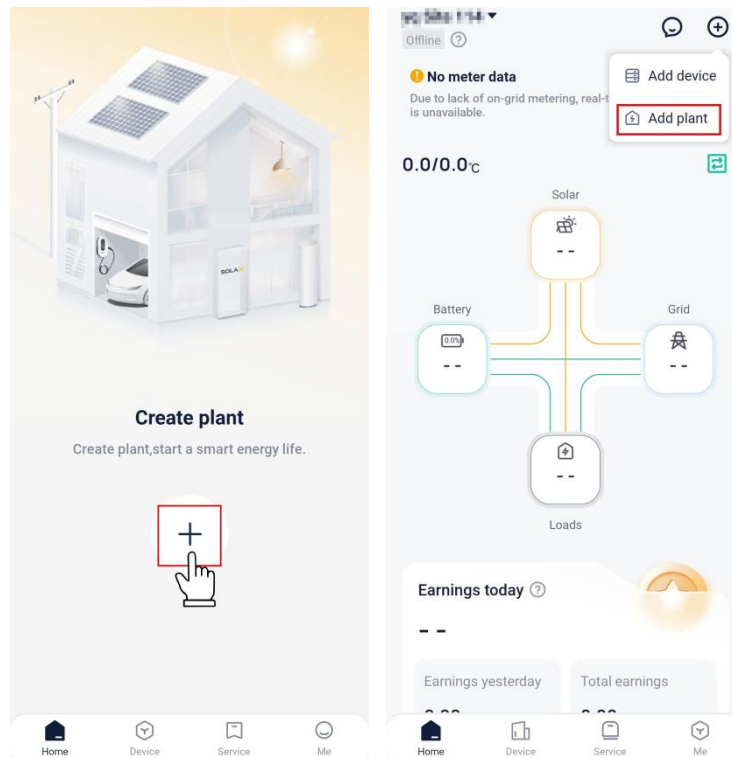

Step 2: Tap **Skip** or **Go to Add** if you have learned about the setup when the setup pages (4 pages in total) pop up.

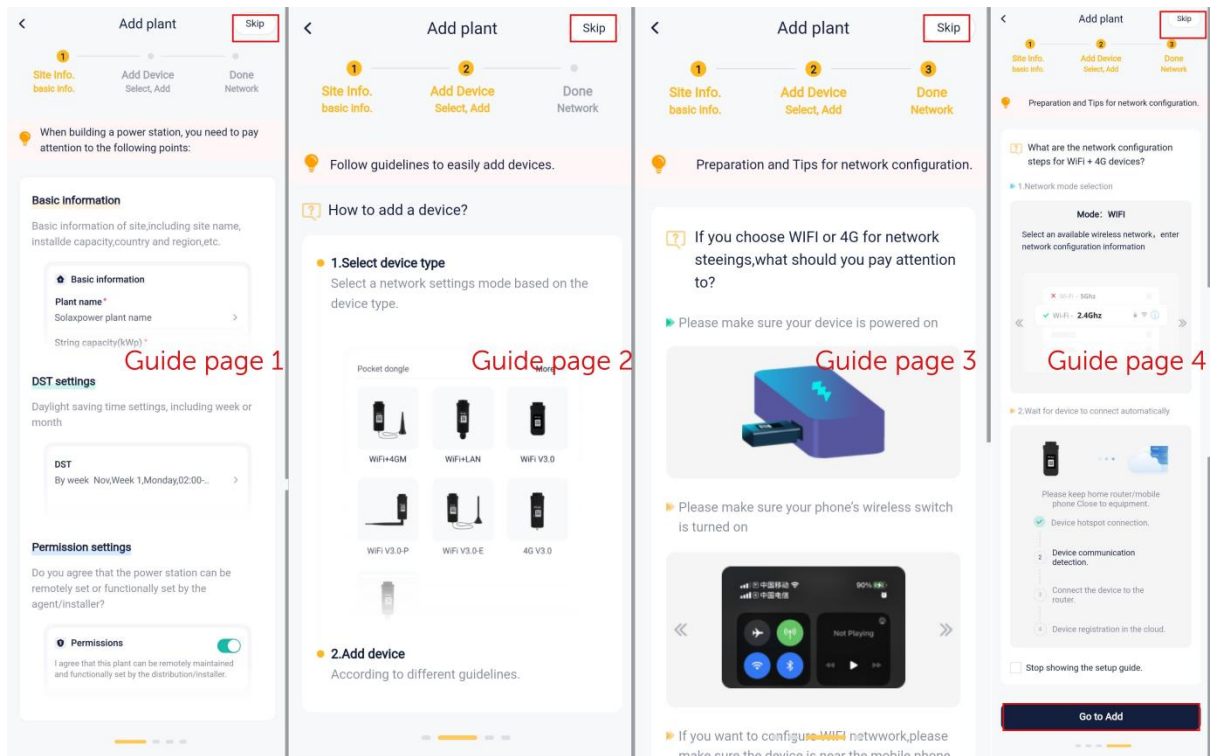

Step 3: Select **WHILE USING THE APP** or **ALLOW THIS TIME ONLY** when the SolaXCloud App asks for your permission to obtain your location information.

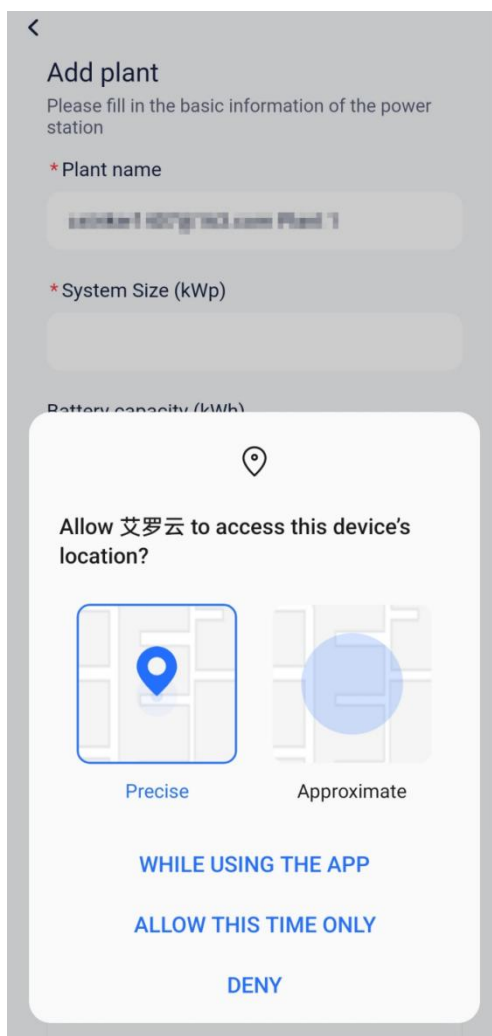

Step 4: Fill in the basic information about the plant, including plant name, system capacity (setting range 0-999999999), country/region, timezone, and location. Select whether to enable **Show first by default** and **Use&Set DST**, and determine whether to authorize the setting and maintenance right to an installer or agent. Then tap **Next**.

Add plant

Please fill in the basic information of the power station

\* Plant name

\* System Size (kWp)

Battery capacity (kWh)

\* Country and region

>

\* Timezone

>

\* Position

☐ Show first by default

☐ Use&Set DST


☐ I agree that the power station can be remotely maintained and functionally set by the agent/installer.(Non personal data will be used)

Next

At this time, you have already created a virtual plant. At the plant list, you can view the plant. If you want to continue the subsequent operations (adding device and network configuration), refer to **Network Configuration**.

## Plant Management


Multiple plants may exist in an account. For convenience of management, you can go to **Me > Plant Management**, to view the plant list, search for a plant, or add a plant:

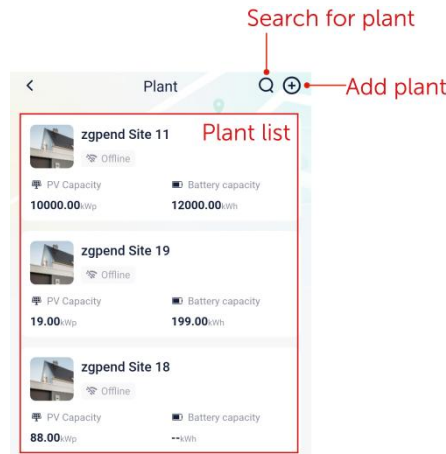

## Single-plant Management


Selecting a plant from the plant list, you can view its details, including basic information about plant, service information and right.

Besides, you can also tap "..." at the upper right corner of the detail page, to perform these operations on a plant: edit plant, delete plant, set a default plant, and set the tariff.

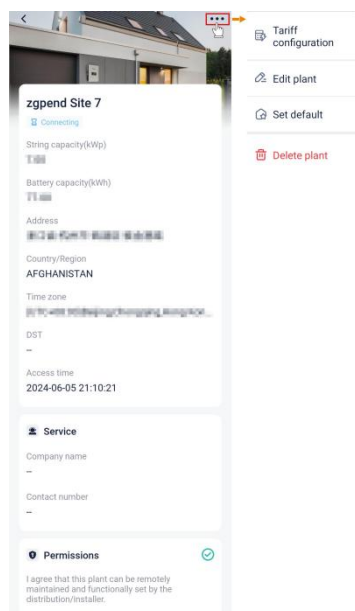


- Edit plant

You can edit the plant basic information and modify the permissions.

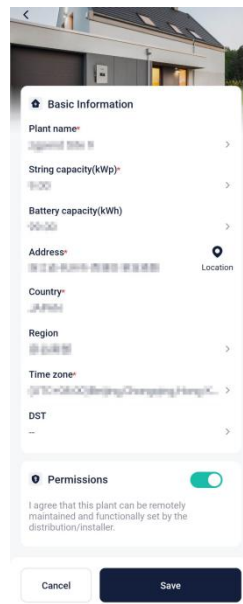

## ● Delete plant

A user can delete a plant which has not been bound with a physical device. When deleting a plant, you need to enter a verification code.

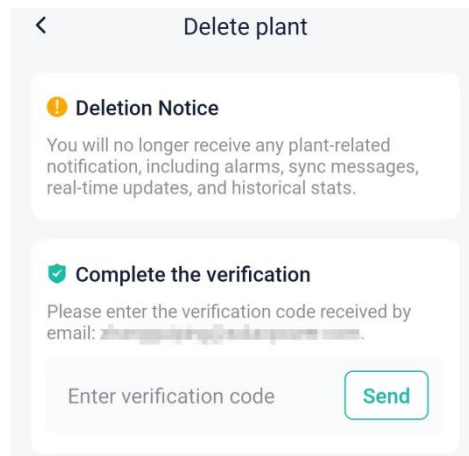


## ● Set default plant


Tap “**Set default**”, to set the current plant as the default plant. After setting it as the default plant, the data displayed at the homepage is just data of the default plant for each login.

## ● Set tariff

You can set the tariff for a plant. For details, see **Setting Tariff**.

## Setting Tariff

Tap “**Setting**”, to go the tariff setting page. Tap the editing icon  , to set the selling/buying (To grid/From grid) tariff.

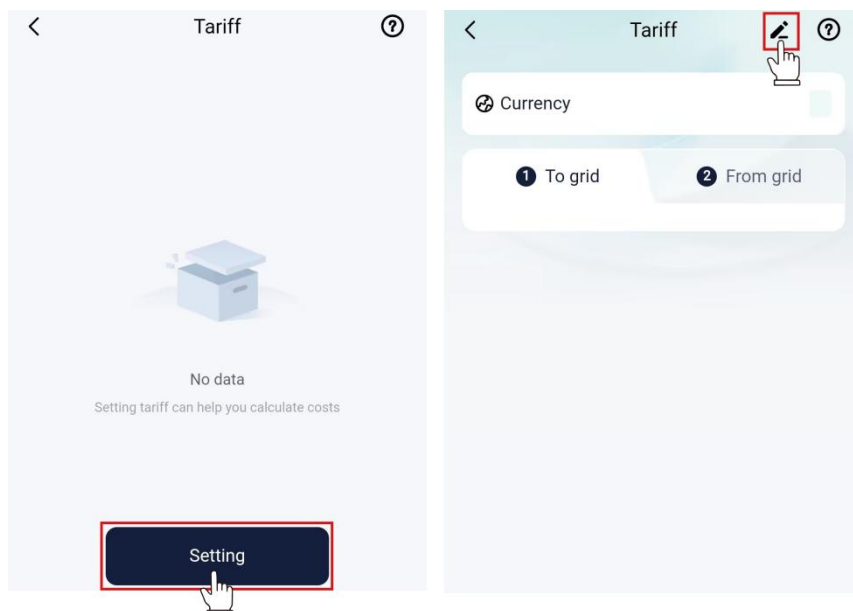


### Setting Selling Tariff

1. Select the currency unit according to the actual situations.
2. Select “**To grid**” from the tab.
3. Adopt a tariff setting method. There are two methods: **Customized** and **Automatic** (hidden in region/country not supporting the service).


#### ● Customized

➤ **Fixed tariff**: Select **Fixed tariff**, set the price, and then tap **Save**.

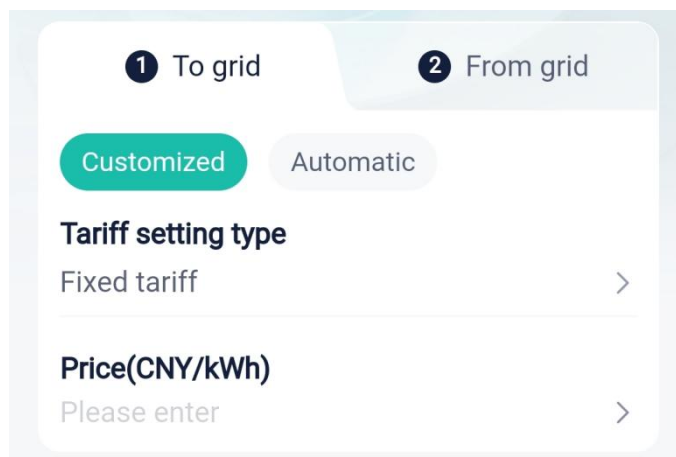


### ➤ TOU tariff:

1. According to your actual situations, tap the blank of end date, to divide a year into different periods.
2. Tap “>” or “**Add tariff**” to enter a period.
3. Divide a day (24h) into different time slots.
4. Set an electricity price for each time slot.
5. After all settings are done, tap **Save**.

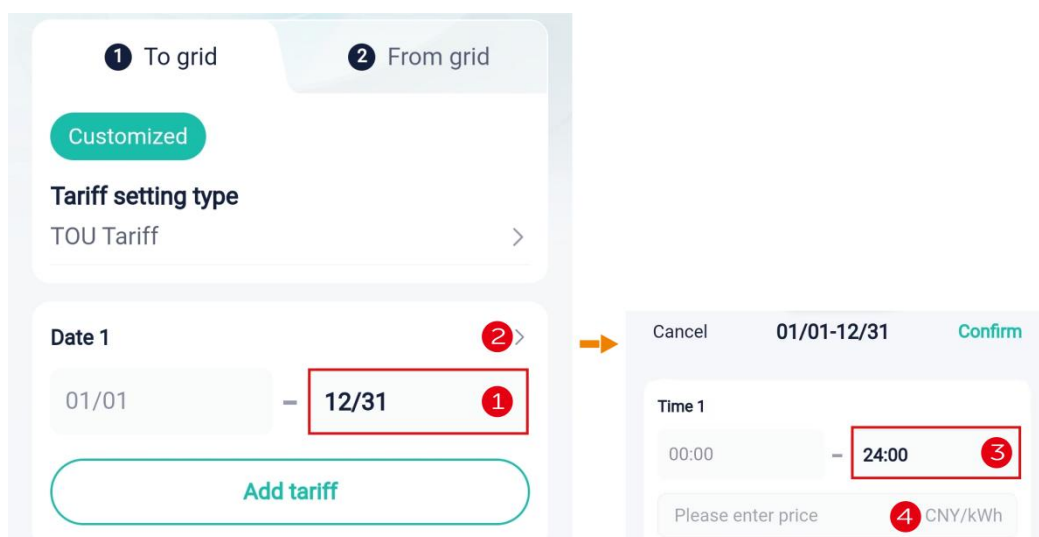


- **TOU tariff (weekdays+weekends):** Similar to settings of **TOU tariff**, but it further provides weekday and weekend settings for a daily cycle.

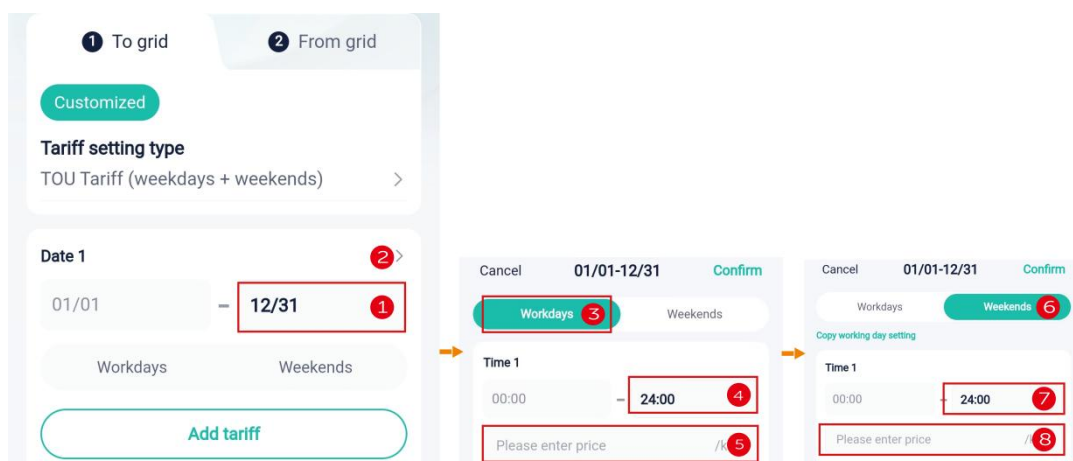

- **Automatic:** You need to set the country/region and handling fee (confirmed by the local grid).



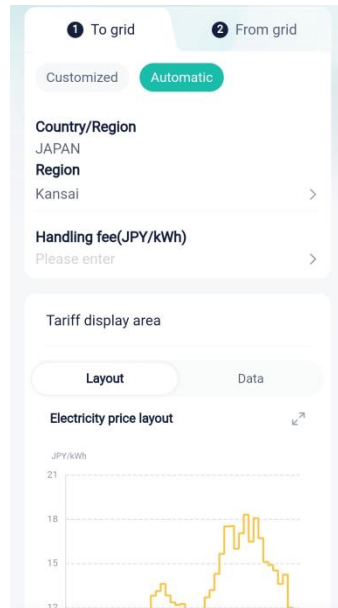

## Setting Buying Tariff

The method for setting the buying tariff is similar to that for setting the selling tariff, which is not described herein. For details, see **Setting Selling Price**.

## Network Configuration

SolaX devices, such as Dongle Pocket, Datahub, Adapter-box, EVC, and X1-Micro, all can connect to the SolaxCloud. Here only take Dongle Pocket (used for communication of an inverter) as an example, to describe the network configuration process. Configuring steps for the other devices are similar to those for Dongle Pocket, which are not described in detail herein.

Dongle Pocket can achieve networking through Wi-Fi, 4G, and LAN. You can adopt one of them to complete networking according to the type of pocket (including Pocket Wi-Fi, Pocket 4G, Pocket LAN, Pocket Wi-Fi+4G, and Pocket Wi-Fi+LAN) you purchased.

# Wi-Fi


## Prerequisites


- The phone WLAN has been switched on and there is Wi-Fi available with a good signal strength.
- Has installed the Pocket with Wi-Fi function and connected it to the device properly according to *Pocket Wi-Fi Installation Manual*, *Pocket Wi-Fi+4G Installation Manual*, and *Pocket Wi-Fi+LAN Installation Manual*.
- The device has been powered on and is close to the router and phone.

## Steps


Step 1: At the login page, select “**More > Network Configuration**”.

Or tap the “+” icon at the upper right corner of the homepage, to select “**Add Device**” from the drop-down menu.

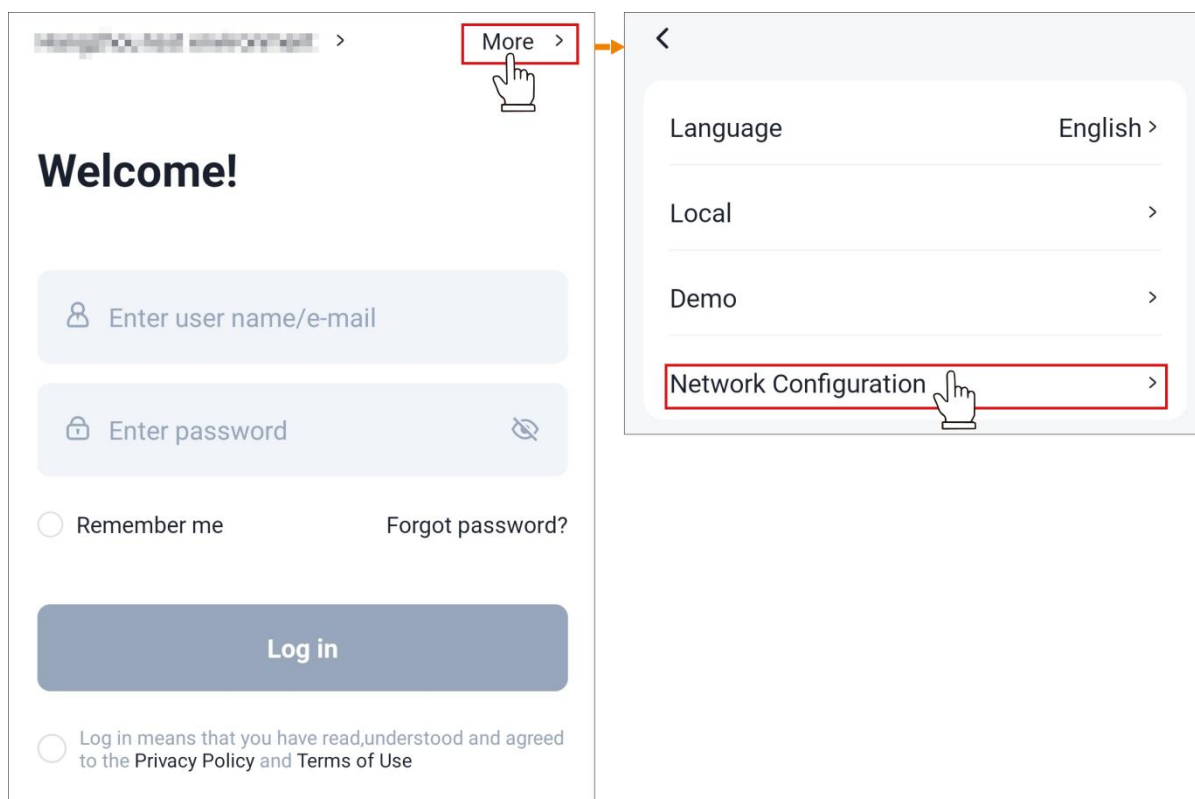


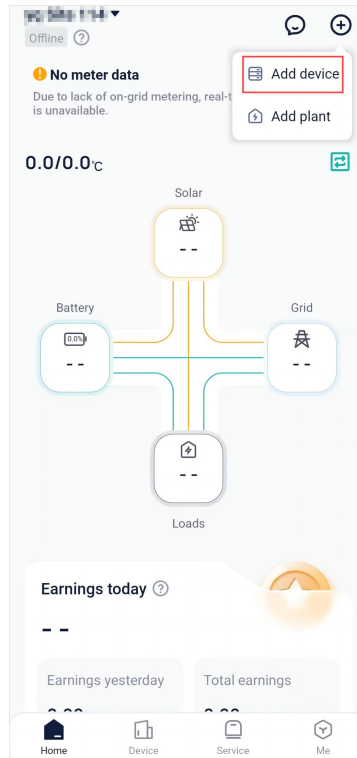

Step 2: Select the correct device type from the pictures below according to the device you have.

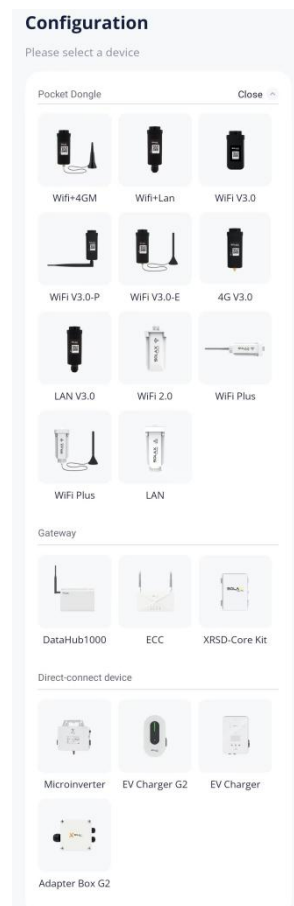


Step 3: Tap **Scan** to scan the Pocket QR code or manually enter the Pocket registration number. After the registration number is identified successfully, tap **Next**.

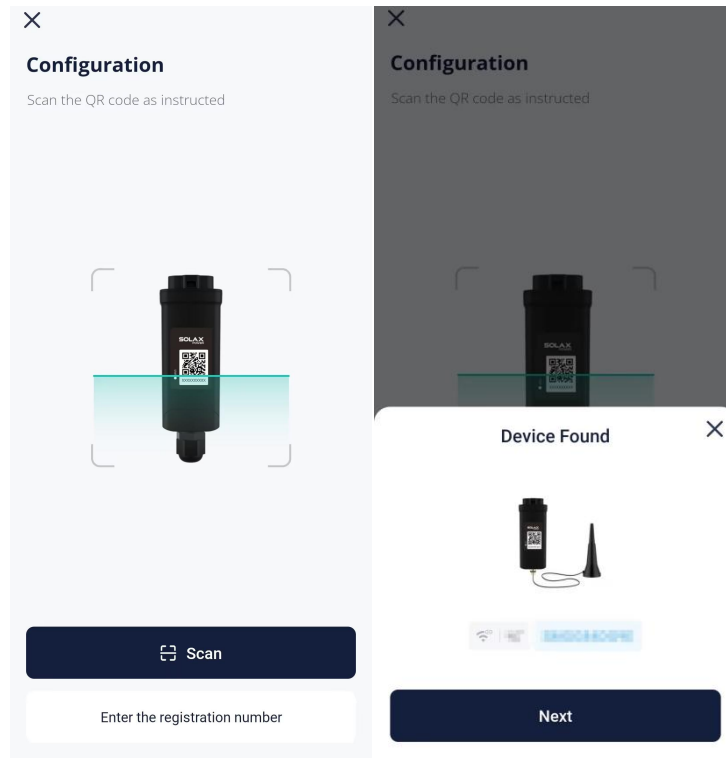


Step 4: Configure the network.


1. Select Wi-Fi as the communication mode (only for Pocket Wi-Fi+4G. Pocket Wi-Fi and Pocket Wi-Fi+LAN not required).
2. Select an available Wi-Fi and enter the password.
3. Select the IP configuration manner.
  - ◆ If selecting the DHCP, there is no other additional configuration.
  - ◆ If selecting the static IP, you need to enter the network parameters manually, including IP address, subnet mask, gateway, and possible DNS server address.
4. Tap **Next**.

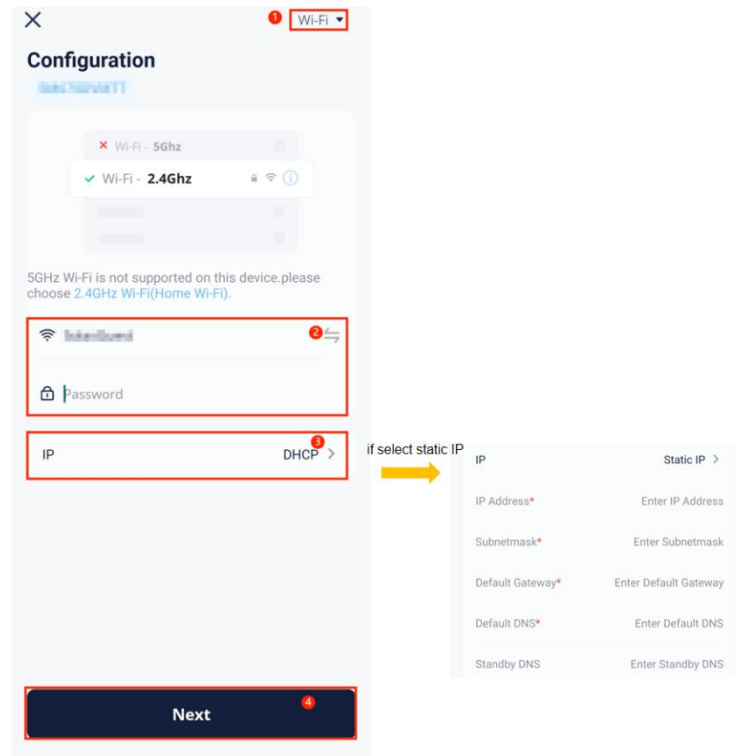


**Note: Users whose phone brand is NOT vivo, HUAWEI, and OPPO can directly skip from this step to Step 6.**

Step 5: Tap **Connect**, and switch the phone WLAN to the device hotspot. The hotspot name is: Wifi\_device SN. After that, return to the SolaXCloud App.

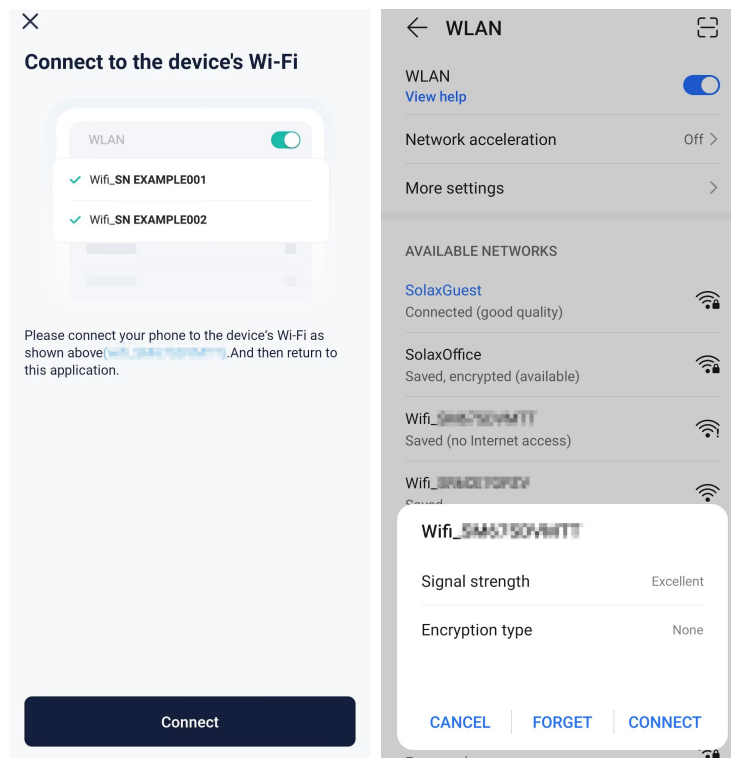


Step 6: When the system enters the following page, wait until the device connects to the site and SolaXCloud. When all items are  , it indicates that the device connects to the SolaXCloud successfully. Tap **Finish**.

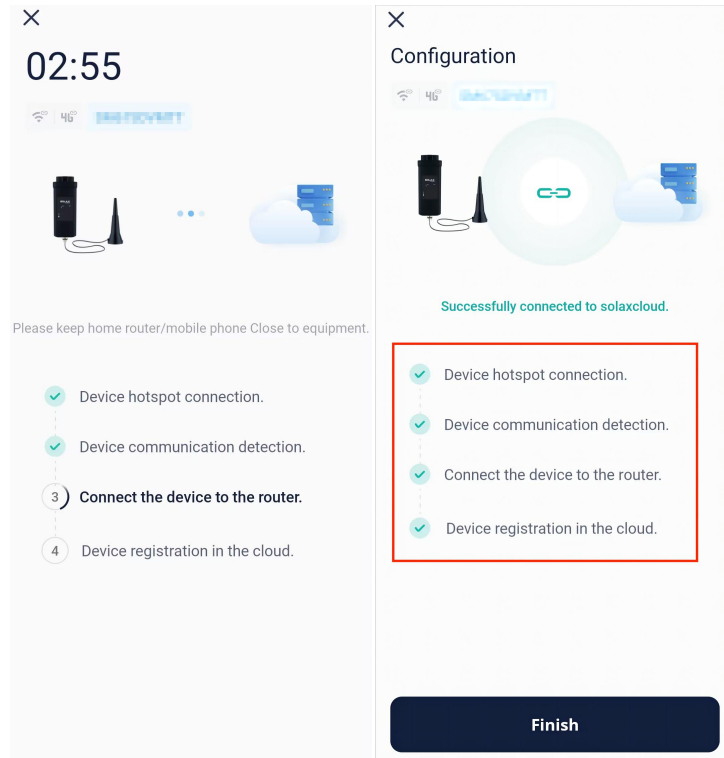



**Note: If the device failed in networking , find the corresponding solution according to the error code.**

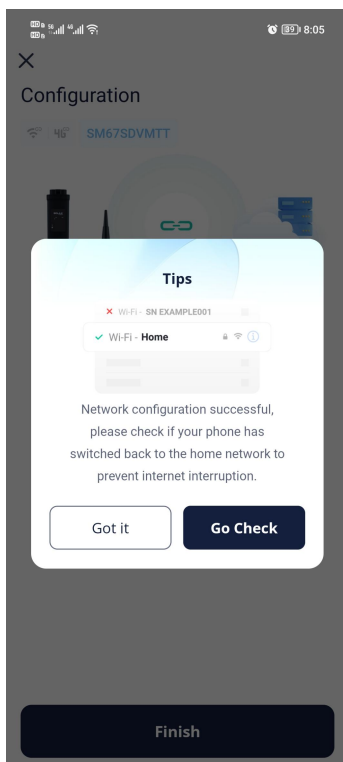Step 7: Tap **Go Check**, to ensure that the phone WLAN has been switched to the family Wi-Fi. After switchover, return to this App and tap **Got it**.



After the device has been connected to the cloud for 5 minutes, you can check the result of connection. Generally, there are two status for a device:

-  indicates that the network configuration succeeded and the device is connected to the SolaXCloud.
-  indicates that the device has been bound with the plant, but the network has not been configured successfully or the device data has not been uploaded to the cloud. You may wait for a while to refresh or go to reconfigure the network. For the method for re-configuring the network, please refer to Step 2 to Step 7.

In addition, if you exit from device adding accidentally or want to add another device to the already existing site, you can start from the following entrances:

Entrance 1: “+” at the upper right corner of the homepage → **Add Device**

Entrance 2: **Device** at the navigation bar → “+” at the upper right corner → **Add Device**

For the other steps, refer to Step 2 to Step 7.

## 4G

### Prerequisites

- Prepare a 4G IoT card (support NB-IoT or Cat-M). Pocket Wi-Fi+4G users need to acquire the APN of the card from an operator.
- Has connected the Pocket with the 4G function to the device according to *Pocket 4G Installation Manual* or *Pocket Wi-Fi+4G Installation Manual*.
- The phone WLAN has been switched on and there is available Wi-Fi nearby with a good signal strength.
- The device has been turned on and is in the range of the 4G signal.


### Steps

As there are differences between Pocket 4G and Pocket Wi-Fi+4G in networking, you need to select the corresponding operation guide according to the type of Pocket.


### For Pocket 4G

Step 1: Tap the “+” icon at the upper right corner of the homepage, to select “**Add Device**” from the drop-down menu.




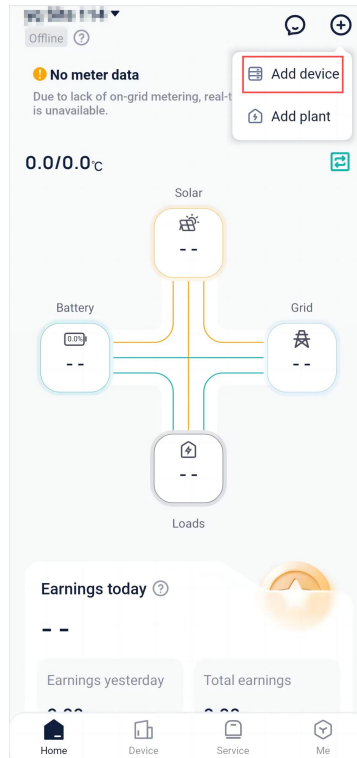


Step 2: Select the correct device type from the pictures below according to the device you have.

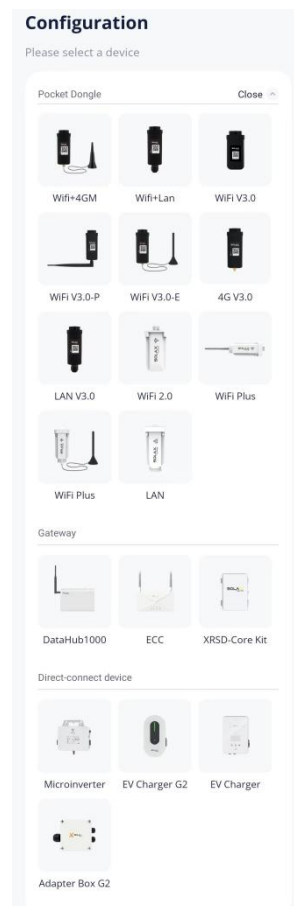


Step 3: Tap **Scan** to scan the Pocket QR code or manually enter the Pocket registration number. After the registration number is identified successfully, tap **Next**.

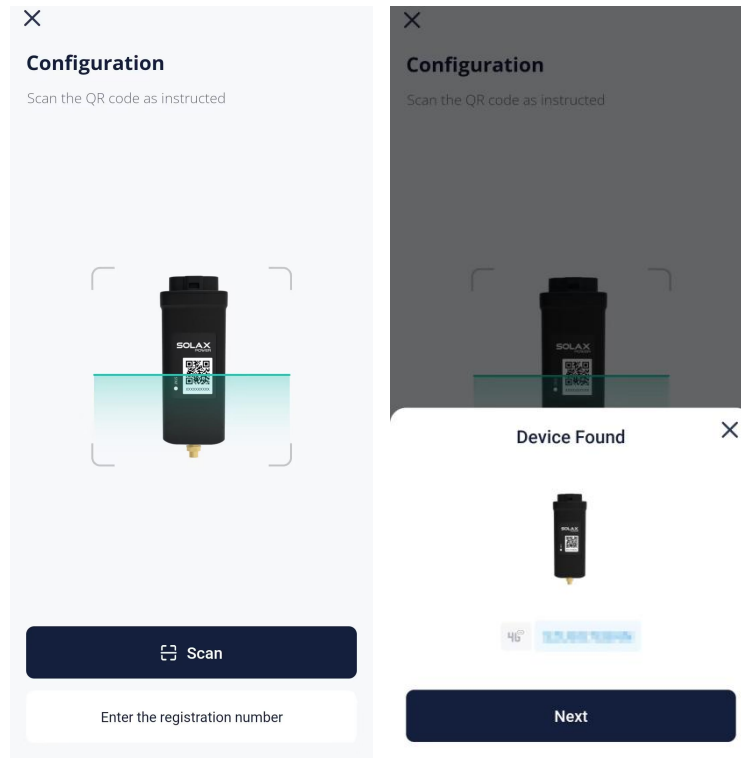

Step 4: Tap **Finish** when this page appears. When a device is bound with a site, it indicates that the device can connect to the SolaXCloud.

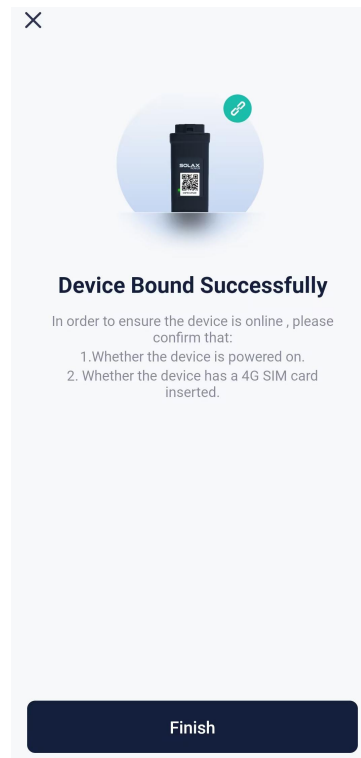

After the device is bound with the site, you can check whether the device has been connected to the SolaXCloud.  indicates that the device is connected to the SolaXCloud successfully.



In addition, if you exit from device adding accidentally or want to add another device to the already existing site, you can select **Add Device** from the drop-down menu by tapping “+” at the upper right corner of the homepage.

### For Pocket Wi-Fi+4G (selecting 4G)


#### Steps

Step 1: At the login page, select “**More > Network Configuration**”.


Or tap the “**+**” icon at the upper right corner of the homepage, to select “**Add Device**” from the drop-down menu.

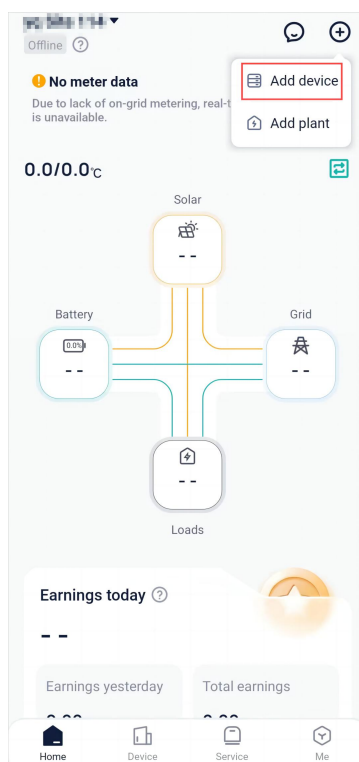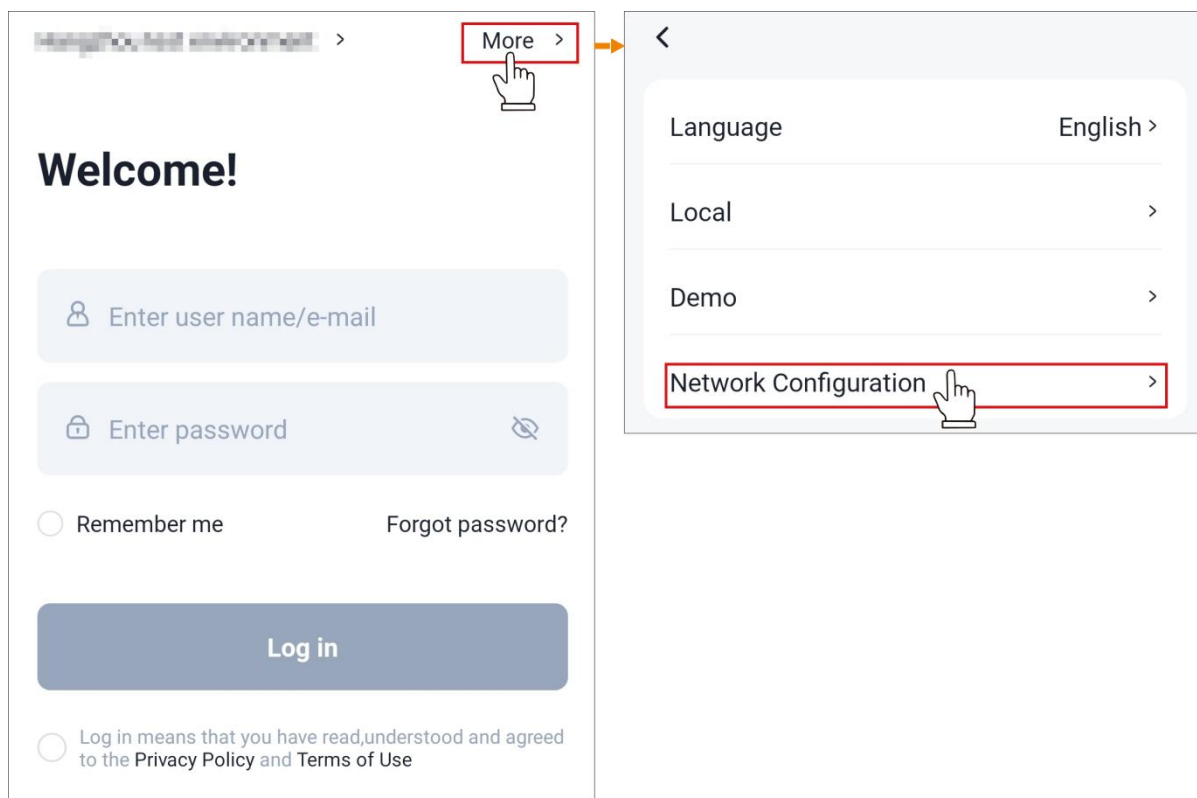


Step 2: Select the correct device type from the pictures below according to the device you have.

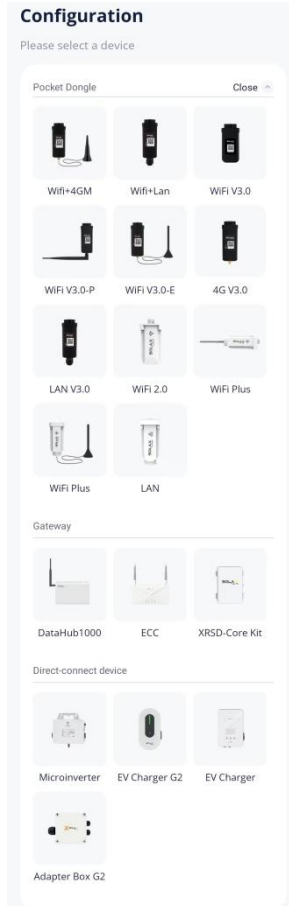

Step 3: Tap **Scan** to scan the Pocket QR code or manually enter the Pocket registration number. After the registration number is identified successfully, tap **Next**.

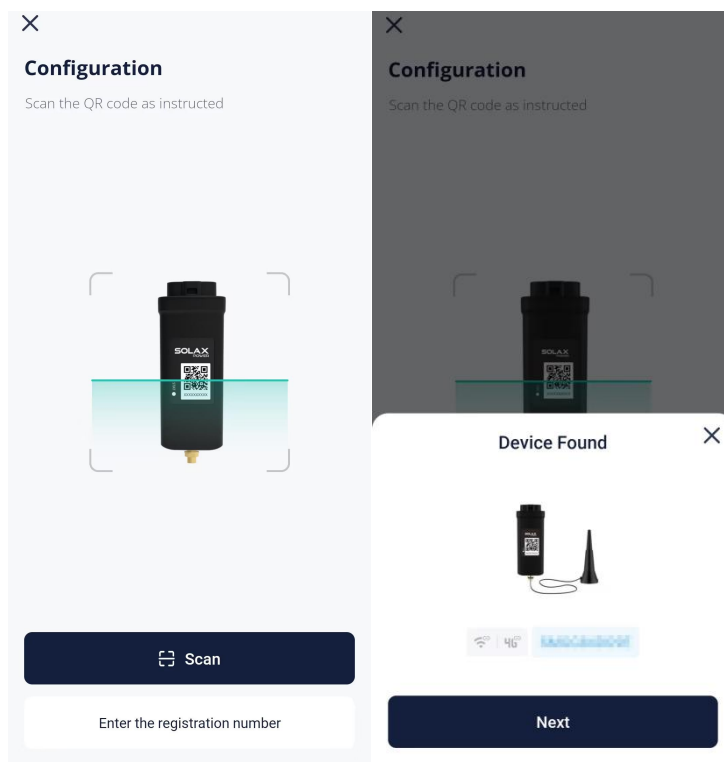



Step 4: Select 4G as the communication method. Enter the APN. Select the network deployment. Tap **Next**.

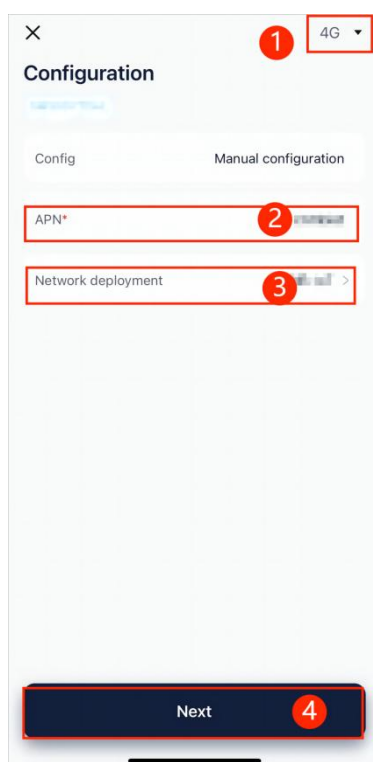


**Note: Users whose phone brand is NOT vivo, HUAWEI, and OPPO can directly skip from this step to Step 6.**

Step 5: Tap **Connect**, and switch the phone WLAN to the device hotspot. The hotspot name is: Wifi\_device SN. After that, return to the SolaXCloud App.

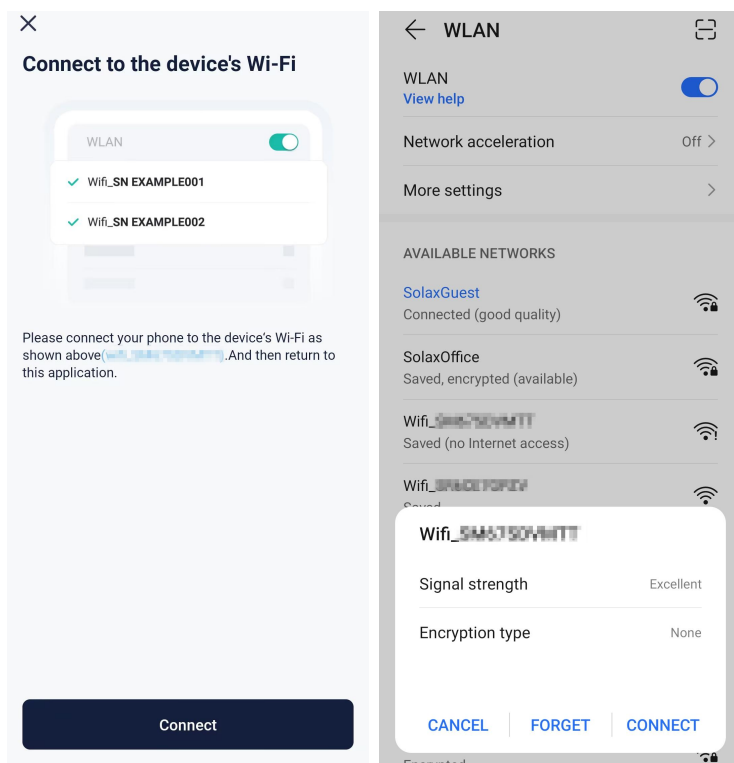


Step 6: When the system enters the following page, wait until the device connects to the site and SolaXCloud. When all items are , it indicates that the device connects to the SolaXCloud successfully. Tap **Finish**.

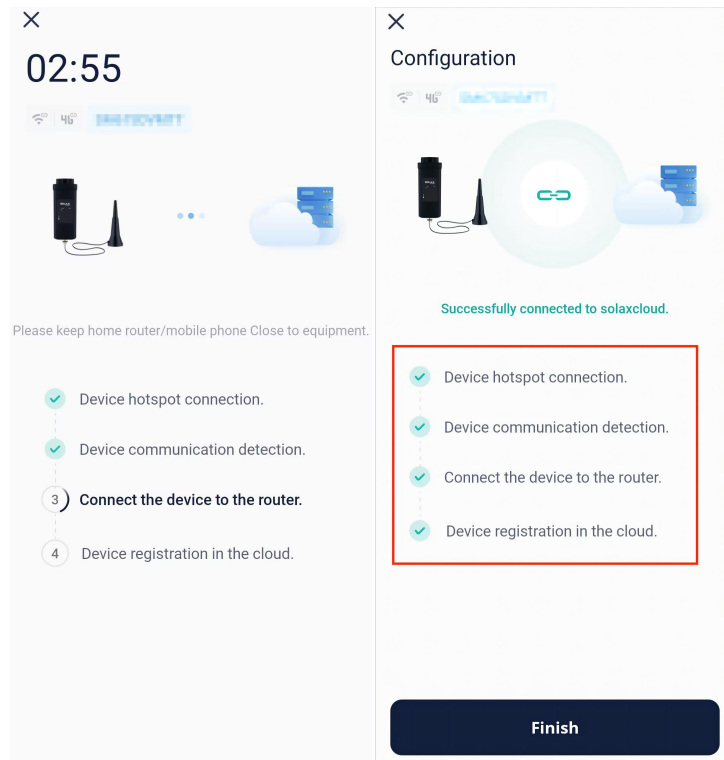



**Note: If the device failed in networking , find the corresponding solution according to the error code.**

Step 7: Tap **Go Check**, to ensure that the phone WLAN has been switched to the family Wi-Fi. After switchover, return to this App and tap **Got it**.

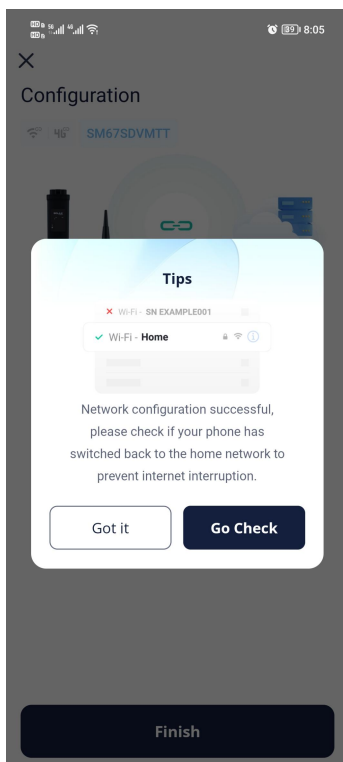



After the device has been connected to the cloud for 5 minutes, you can check the result of connection. Generally, there are two status for a device:

-  indicates that the network configuration succeeded and the device is connected to the SolaXCloud.
-  indicates that the device has been bound with the plant, but the network has not been configured successfully or the device data has not been uploaded to the cloud. You may wait for a while to refresh or go to reconfigure the network. For the method for re-configuring the network, please refer to Step 2 to Step 7.

## LAN


### Prerequisites

- The phone WLAN has been switched on and there is Wi-Fi available with a good signal strength.
- Has installed the Pocket with the LAN function and connected it to the device properly according to *Pocket LAN Installation Manual* or *Pocket Wi-Fi + LAN Installation Manual*.


- The device has been powered on.

### Steps


Step 1: Tap the “+” icon at the upper right corner of the homepage, to select “**Add Device**” from the drop-down menu.

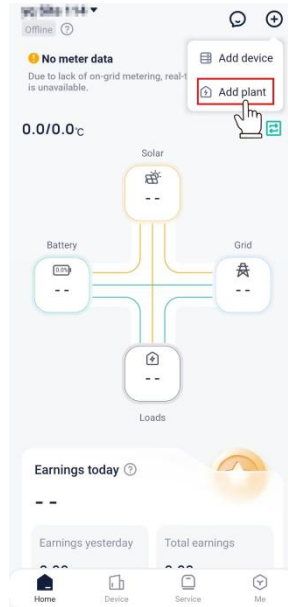


Step 2: Select the correct device type from the pictures below according to the device you have.

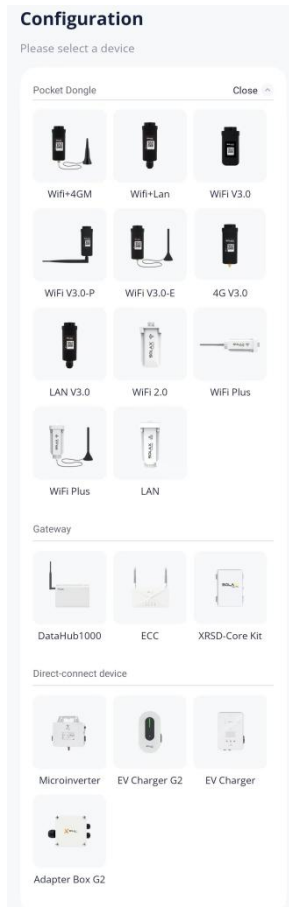


Step 3: Tap **Scan** to scan the Pocket QR code or manually enter the Pocket registration number. After the registration number is identified successfully, tap **Next**.

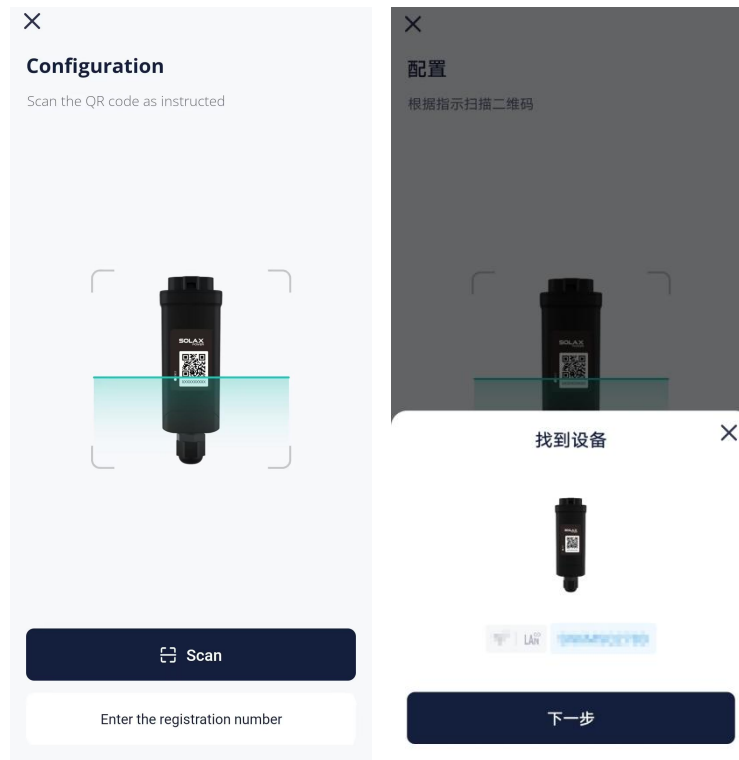

Step 4: Tap **Finish** when this page appears. When a device is bound with a site, it indicates that the device can connect to the SolaXCloud.

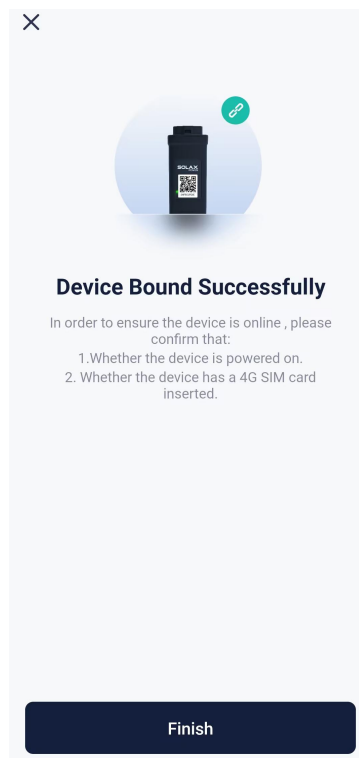

After the device is bound with the site, you can check whether the device has been connected to the SolaXCloud.  indicates that the device is connected to the SolaXCloud successfully.

In addition, if you exit from device adding accidentally or want to add another device to the already existing site, you can select **Add Device** from the drop-down menu by tapping “+” at the upper right corner of the homepage.

## Homepage Introduction

The page on the left side is homepage, which displays the overall running situations of a plant. The table on the right side introduces composition and functions of this page.




SN	Description
a	Displays the name and status of the current plant. You can switch from the current plant to another.  Plant status includes <b>Normal</b> , <b>Offline</b> , <b>Accessing</b> , and <b>Alarm</b> .
b	Weather
c	Messages and notifications
d	Entrance to adding a plant and device
e	Dynamic graph switchover icon
f	Energy flow graph (abstract and concrete): Dynamically display the flow trends among battery, grid, PV, and load.
g	Displays the revenue the plant gained today, yesterday, and in total.
h	Displays the battery-related data, including battery SOC, remaining battery amount, predicted battery lasting time, charge/discharge status, and power consumption and generation amount.
i	Displays the equivalent environmental value. Indicators are CO <sub>2</sub> emission reduction, x trees planted, and coal reduction amount.

# Device

## Device-related Operations

At the navigation bar, select **Device** to go to the device list page. By switching the device at the upper left corner, you can view all devices under a site. Tap a device, and you can view details of the device. For details about it, please see **Device Details**.

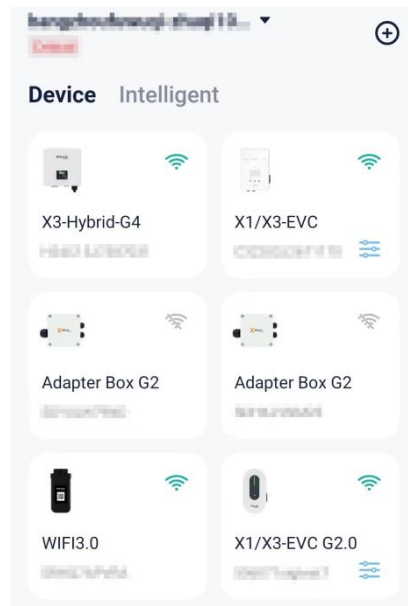


Besides, you can execute the following operations on a device:

- Remote settings: Tap to enter a single device, and you can set the device remotely. Please set it under guidance of an installer or agent, or it may lead to device abnormality or failure.
- Add device: Tap “+” at the upper right corner of the page, to add a device.
- Unbind device: Tap to enter a single device, to unbind a device from a plant.

## Device Details

Here take the inverter X3-hybrid-G4 as an example, to show composition of a device detail page. Device pages vary with device types. The device detail page is subject to the actual situations.

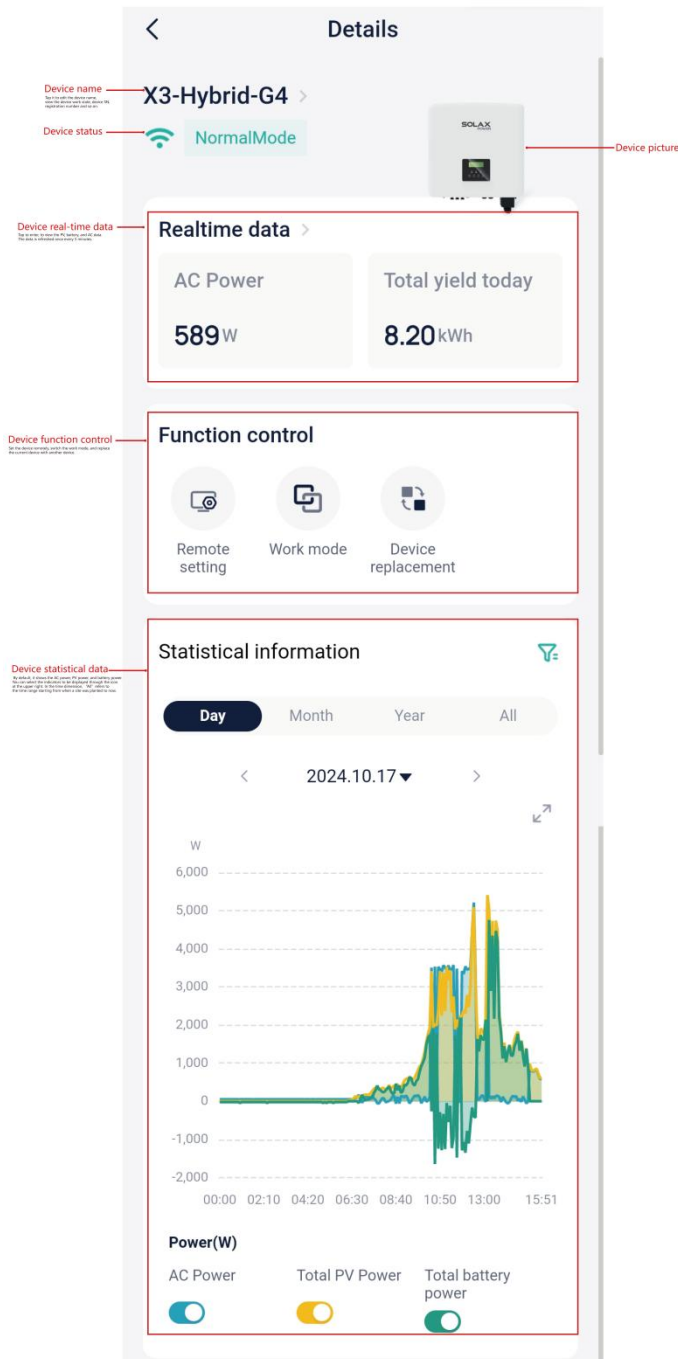



# Intelligence

## Overview of Intelligence

To help you manage your household energy more efficiently, the section of Intelligence provides you with two major functions: Time of Use (TOU) mode and automation scenarios.


TOU is a mode in which different electricity consumption strategies are adopted according to different electricity prices in different time periods. For the specific setting method, see **Intelligent (TOU)**.

Automation scenario includes recommended scenario and custom scenario.

Recommended scenarios are classic scenarios we made by analyzing product features, user habits and others. Without any setting, just one tap to apply the scenario.

Custom scenario is to let ordinary people become "engineer" —— Free of programming! Just set the trigger condition and execution action. Then you can get a customized scenario. For the method for setting a automation scenario, see Automation Scenario.

The picture below shows distribution of main functions of the **Intelligence** page.

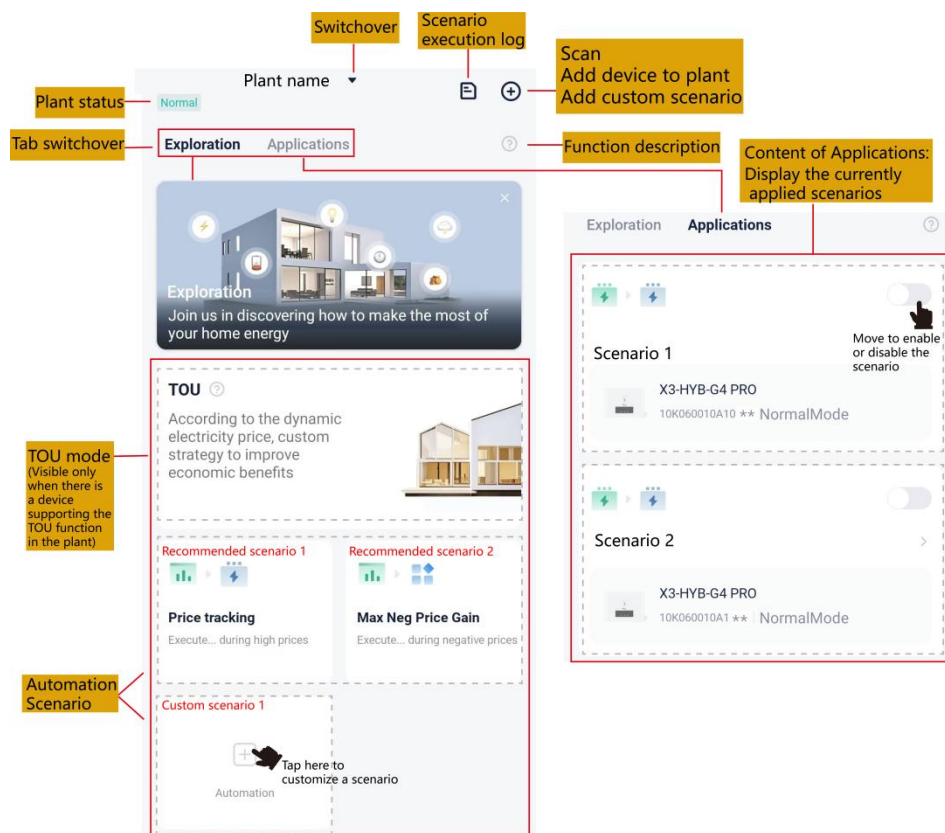

[Note] The content of this page may vary with country/region, device type, or model, which shall be subject to the actually displayed page.

## Intelligent (TOU)

TOU (Time of Use) is a mode in which you can set different electricity prices and usage strategies for different time periods. By setting the charge/discharge time periods, the battery can be charged in lower electricity price periods, and discharge in higher electricity price periods, to save electricity costs.

Select **Device>Intelligent** to set the TOU mode. It should be noted that the sub menu **Intelligent** is visible only when a device in the current site supports the TOU function and the device is online.

### Step 1: Tap **Create TOU**.

**Step 2:** Add the basic information for TOU, including selecting TOU name; selecting a device to be controlled (optional); selecting the period type; selecting the cycle type (if you select **Customized** as period type); and setting the min battery SOC.


- If selecting **Import period**, you can directly invoke the period you have created before. For the TOU tariff setting method, refer to **Setting Tariff**. Non-TOU tariff (referring to fixed tariff and custom auto tariff here) cannot be imported.
- If selecting **Customize**, you need to divide periods yourself.

**Step 3:** Set the work mode to cycle according to the period type. A user can divide one year into different periods, and set work modes for daily cycle in each period. One day can be divided up to 10 time slots and supports 5 work modes at most.

- **Import period**


As you have created the period and tariff during tariff setting, after importing the period, you only need to complete the following steps:

1. Tap “>” on the upper right corner of each period, to enter the period to edit it.
2. Tap the column of work mode, to enter the work mode page.
3. Set work mode and corresponding parameters (if any) for each time slot. After setting, tap **Save**.
4. After setting work modes for each period, tap **Save**.

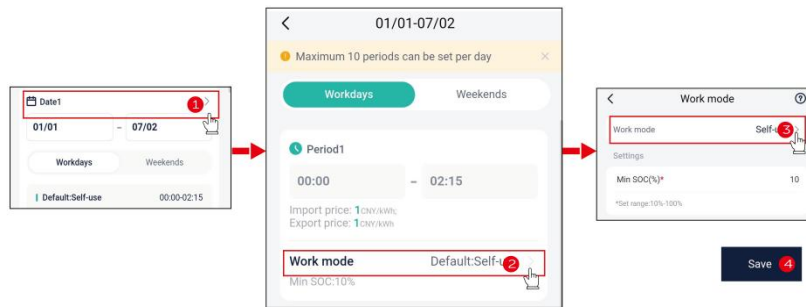

## ● Customize

1. Tap the column of start date, to divide one year into different time periods.
2. Tap **Add content** to enter each period.
3. Tap the column of end time, to divide one day (24h) into different time slots. Two neighboring time slots cannot be overlapped with and separated from each other.
4. Set work modes for each time slot. After setting, tap **Save**.
5. After setting work modes for each period, tap **Save**.

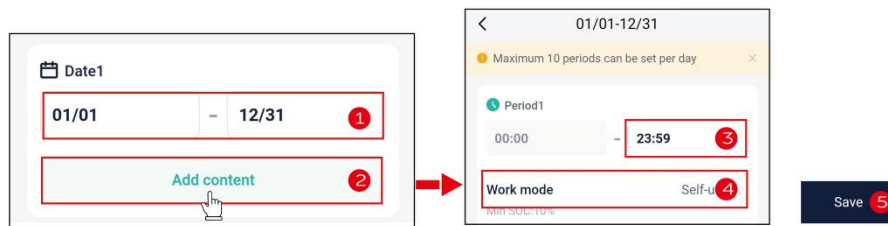

**Step 4:** Return to the **Create TOU** page and tap **Save** , to complete creation of TOU mode.


You can apply this TOU mode to devices that support TOU.

## Automation Scenario

This section introduces the method for setting automation scenarios. Automation scenarios include recommended scenarios and custom scenarios.

### Recommended Scenario


We recommend you four scenarios: **Price Tracking**, **Max Neg Price Gain**, **Disaster Warning** (support America and Japan only now), and **Off-power Warning** (support Africa only). The recommended scenarios you see may vary with country/region, device type, model and others, which shall be subject to the actually displayed page. The following picture shows how to apply a recommended scenario by taking **Price Tracking** as an example.

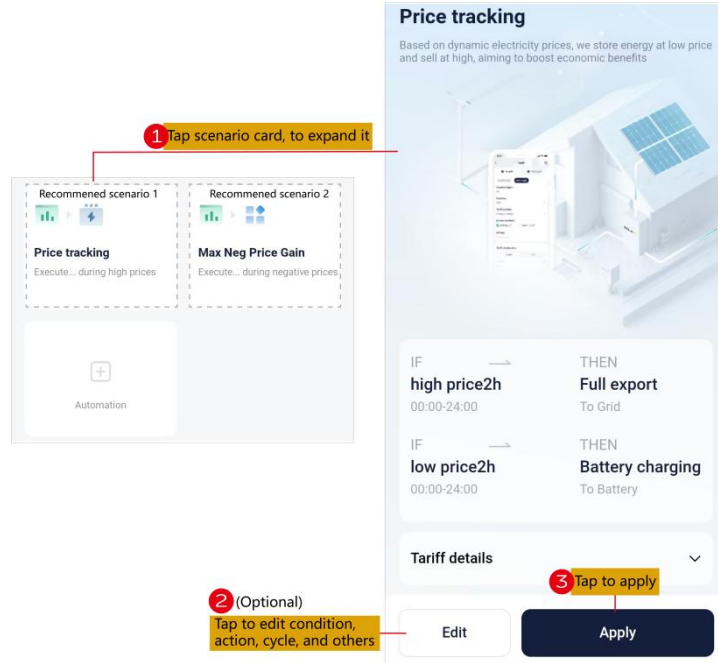

If you do not want apply a scenario any more, tap **Applications** and find the scenario card. Tap it to enter its detail page and tap **Delete** in the upper right corner.

## Custom Scenario

Under the guidance of the picture below, create a custom scenario:

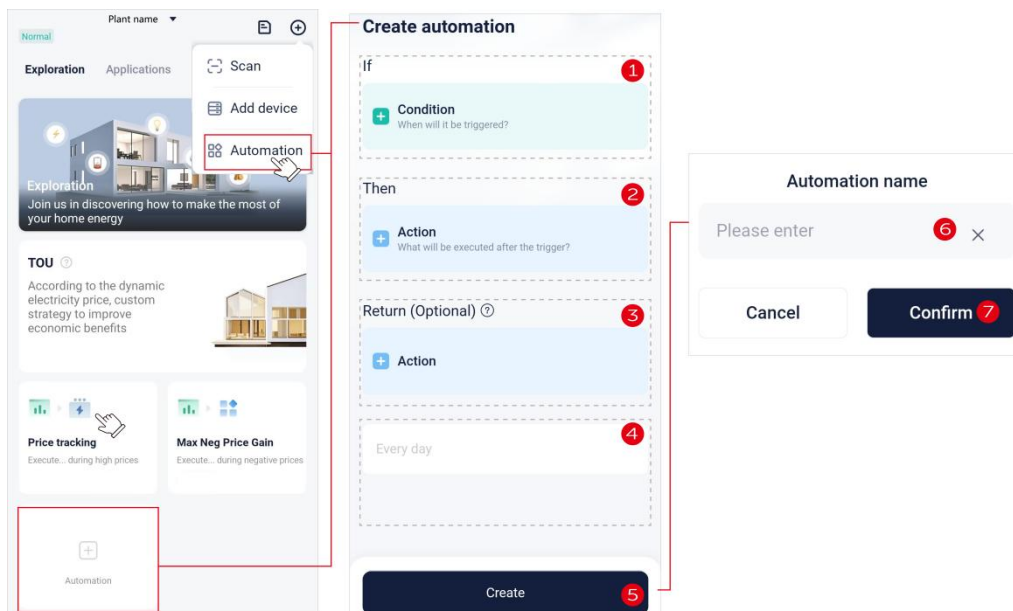


If you do not want apply a scenario any more, tap **Applications** and find the scenario card. Tap it to enter its detail page and tap **Delete** in the upper right corner.

## Service

### Warranty Management

In the **Warranty Management** module, users can view the list of warranties under the current account. The warranty list shows all devices for which the warranty has been claimed. In addition, you can also filter and edit a warranty.

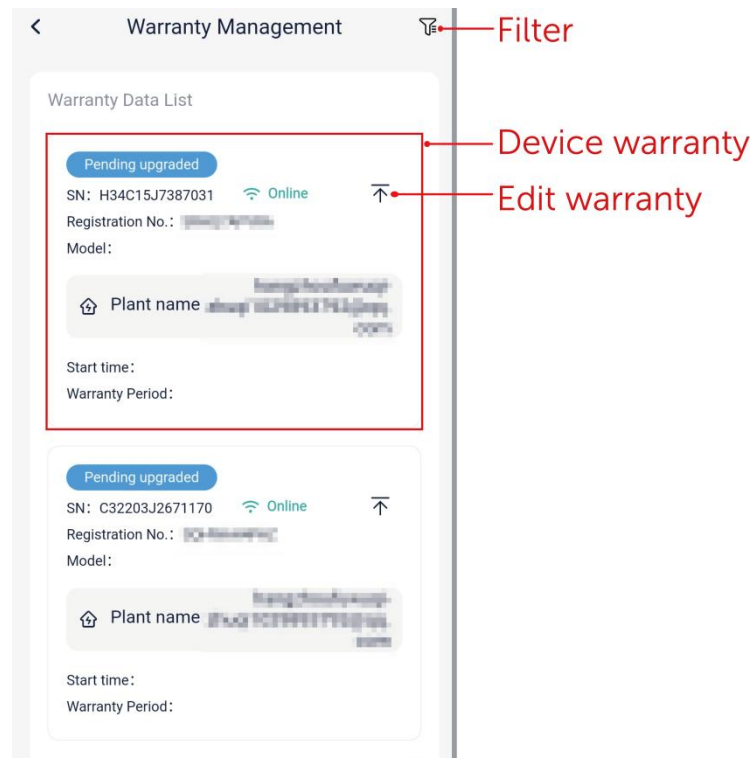


### Third-party Ecology

Through the API service, users can access the SolaXCloud to obtain real-time data, historical data and alarm messages of authorized inverters.

### Email Subscription


Through subscription function, you can get the latest running data of the device and keep track of the situations of the device at any time.

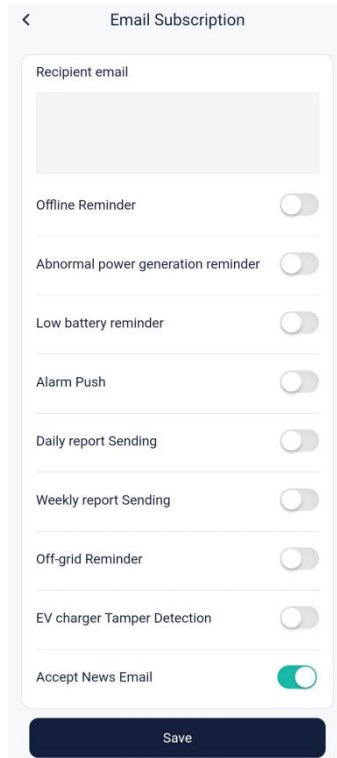

## Help Center

In the **Help Center**, you can:

- watch learning videos to quickly grasp the essentials of network configuration.
- view the App instructions to learn how to use the App in an all-round way.
- feed your problems or suggestions back to us in the application of the App.
- view the contact information of the installer or agent for timely assistance.

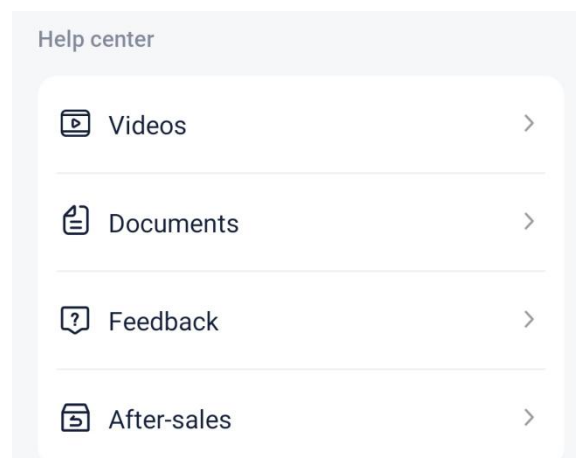


## EV Charger

Tapping **EV Charger** to enter the **EV Charger Card Management** page, you can:

- view all EV charge cards under the selected plant.
- add an EV charge card.
- delete an EV charge card.


### Viewing EV charge cards

Select a plant, and the red area is all EV charger cards under the plant.

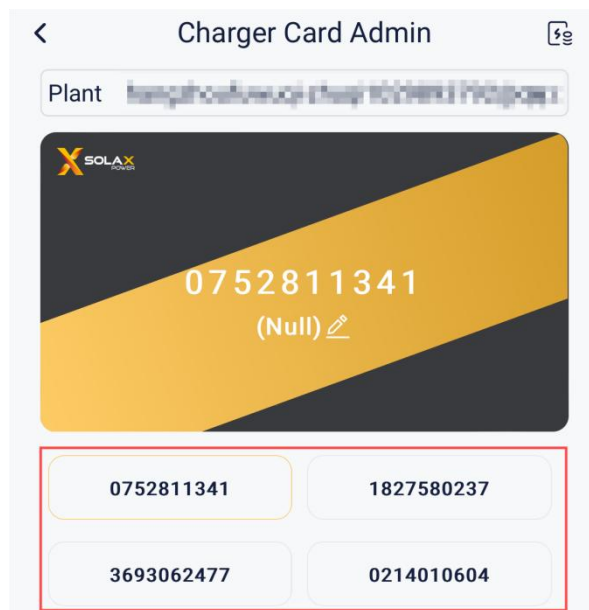


### Adding EV charge card

1. Select the plant to which you want to add the card (the EV charger has been bound to the plant, and successfully connected to the cloud).
2. Tap **Add** and select a method to add.
  - Scan the barcode: The barcode on the EV charger card.
  - Enter the card number: The card number of the EV charger card.
  - Bind through the EV charger: Put the card close to the swipe board of the EV charger. When you hear the sound of "deeeee---", it means swiping the card succeeds.

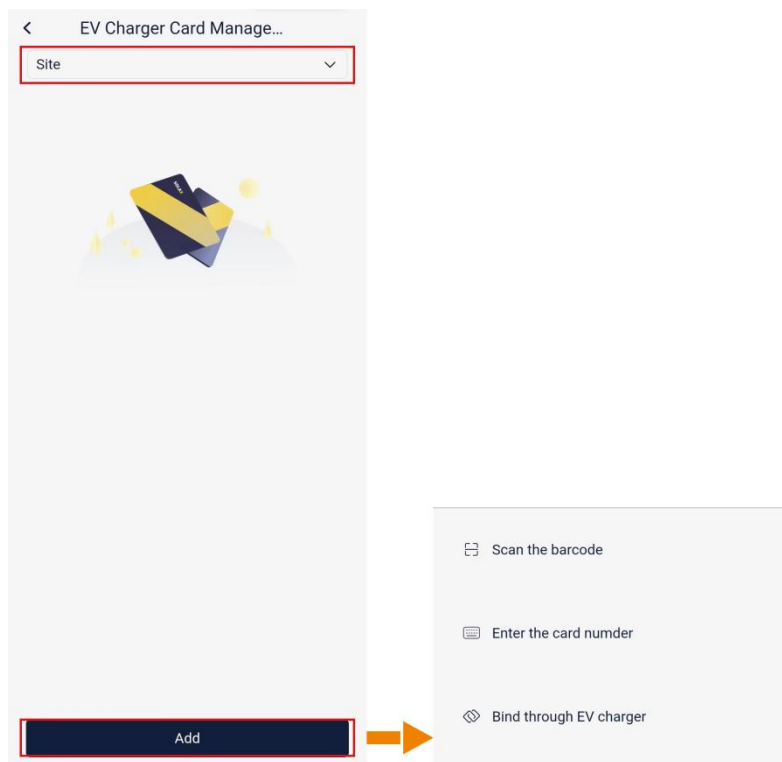

### Deleting EV charge card

Select the EV charger card to be deleted from all the EV charger cards under the plant. Long press the card, and then **Delete** will appear. Tap **Delete** to complete it.

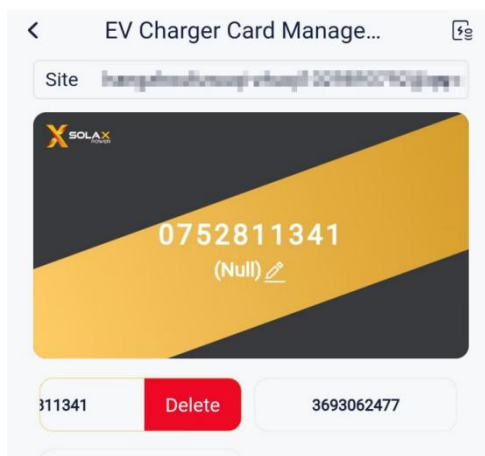

## Local Mode


In local mode, users can view device local data and alarm messages, and switch communication methods without a network.




There are two entrances to accessing the local mode :

- On the login page, select **More>Local Mode**.
- On the homepage, select **Services>Applications>Local Access**.

## Login

1. Tap the  icon to scan the Pocket QR code or manually enter the Pocket registration number. After the registration number is identified successfully, enter the local password (optional. If the end user has set the local password) and tap **Login**.

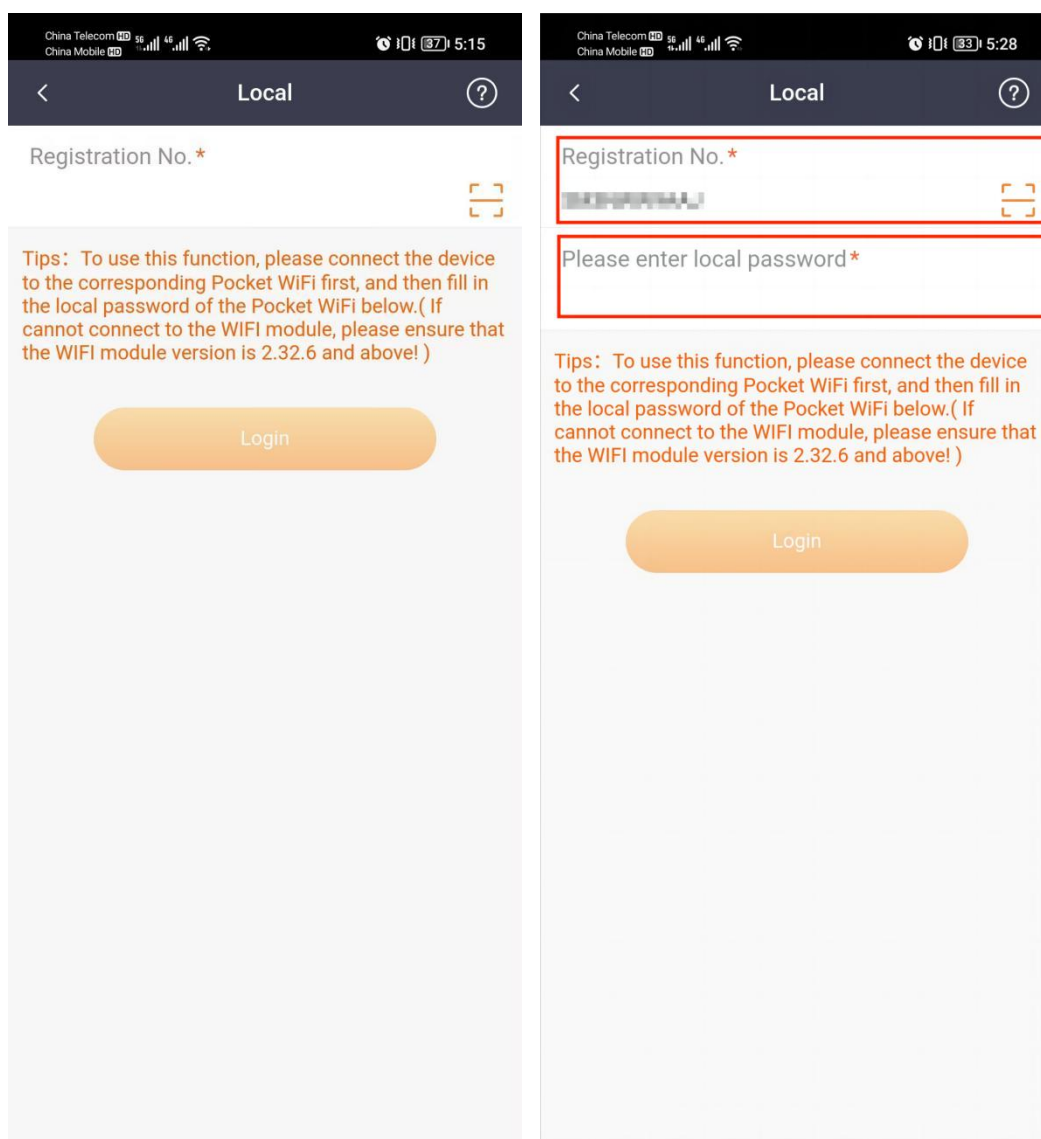


The image displays two screenshots of the SolaX mobile application's 'Local' login screen. Both screenshots show a dark blue header with a back arrow, the title 'Local', and a help icon. The status bar at the top indicates the time and network status.

**Left Screenshot (Time: 5:15):** The screen shows the 'Registration No.\*' label and a QR code icon. Below this is a tip: 'Tips: To use this function, please connect the device to the corresponding Pocket WiFi first, and then fill in the local password of the Pocket WiFi below.( If cannot connect to the WIFI module, please ensure that the WIFI module version is 2.32.6 and above! )'. At the bottom is an orange 'Login' button.

**Right Screenshot (Time: 5:28):** This screenshot shows the same screen but with the input fields highlighted by red boxes. The 'Registration No.\*' field contains a masked value. Below it is the 'Please enter local password\*' field. The same tip and 'Login' button are present.


2. Tap **Connect** when the following window pops up.

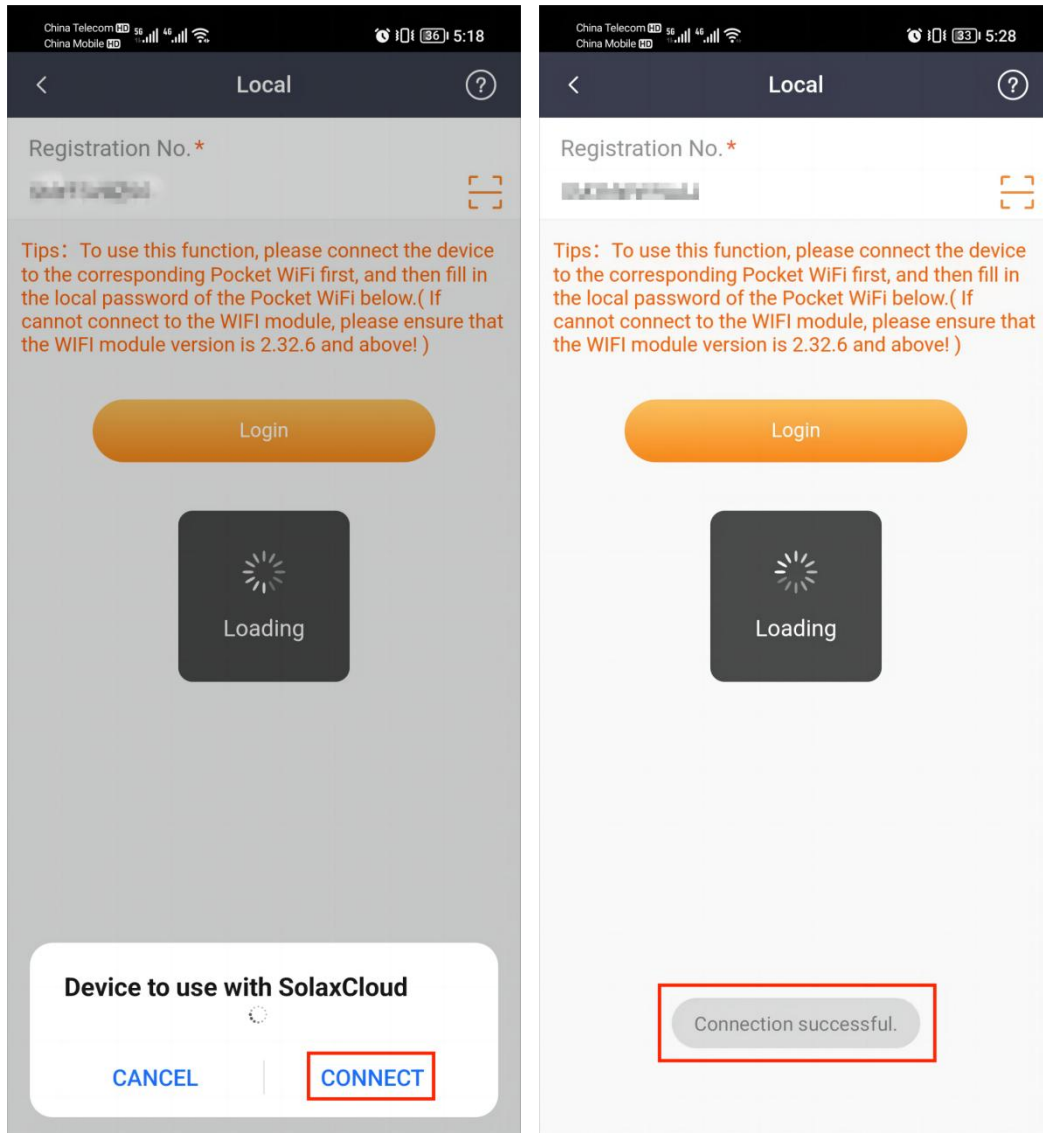


## Dongle

When using a Dongle Pocket Wi-Fi+4G as the communication device, you can switch between Wi-Fi and 4G by configuring the corresponding network in local mode.


## Wi-Fi Network Configuration

**Step 1:** Select **Dongle** at the bottom bar, to go to the **Dongle** page. At the **Dongle** page, tap  at the upper right corner to go to the network configuration page.


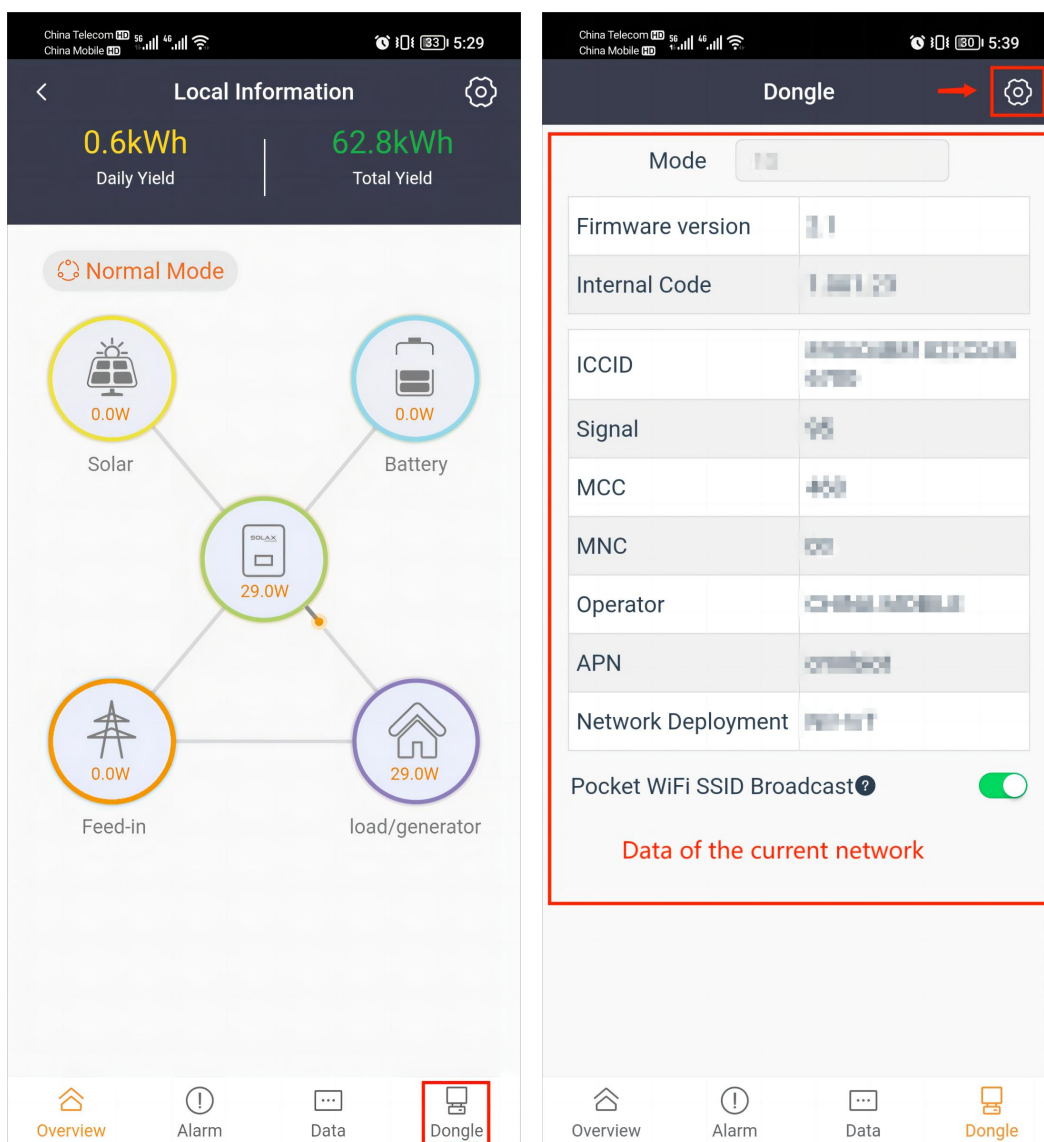


**Step 2:** At the network configuration page, configure the following items:


- (1) Select **Wi-Fi** as the communication mode.
- (2) Tap the **Find AP** button to select an available network from the AP list.
- (3) Enter the network password.
- (4) Select whether to switch off DHCP. If DHCP is switched off, you need to provide detailed information about the network.
- (5) Tap **Next**.

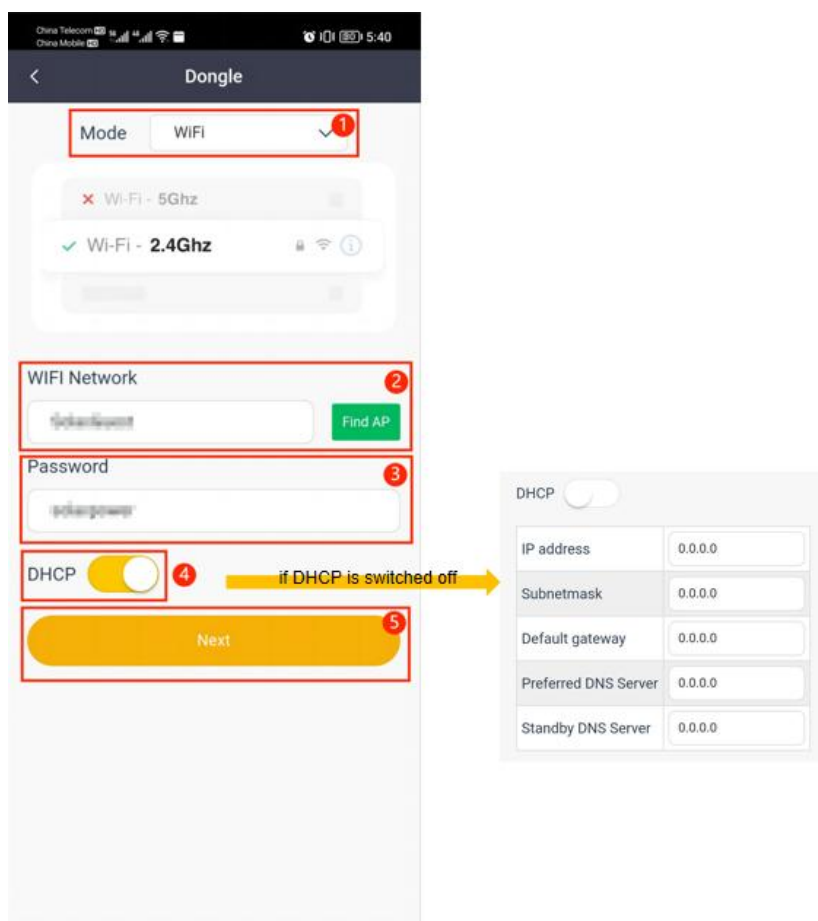


**Step 3:** Wait for several minutes until all indicators (shown in red box) are lit up, which indicates that device Wi-Fi network configuration is successful. Tap **OK**.

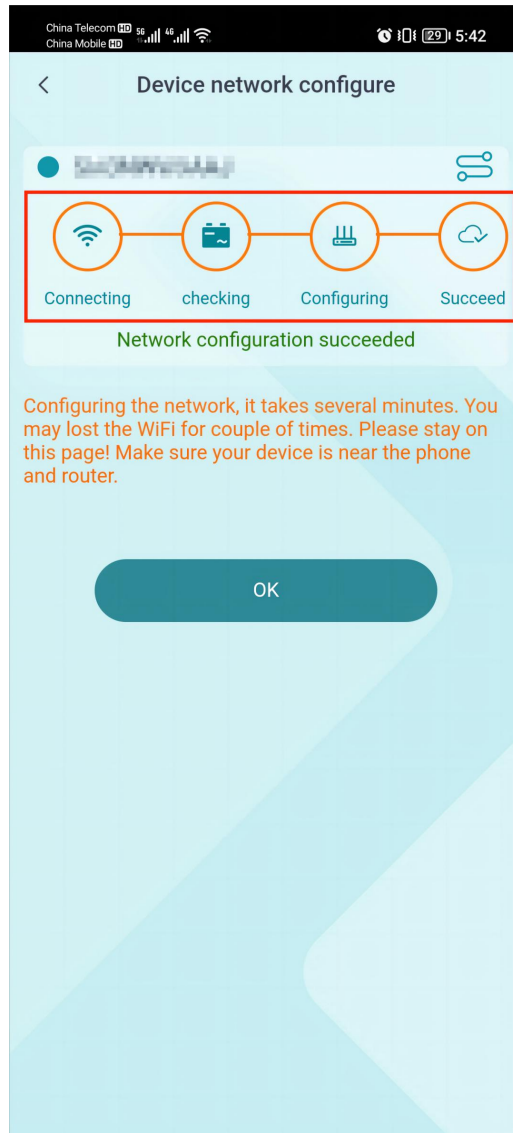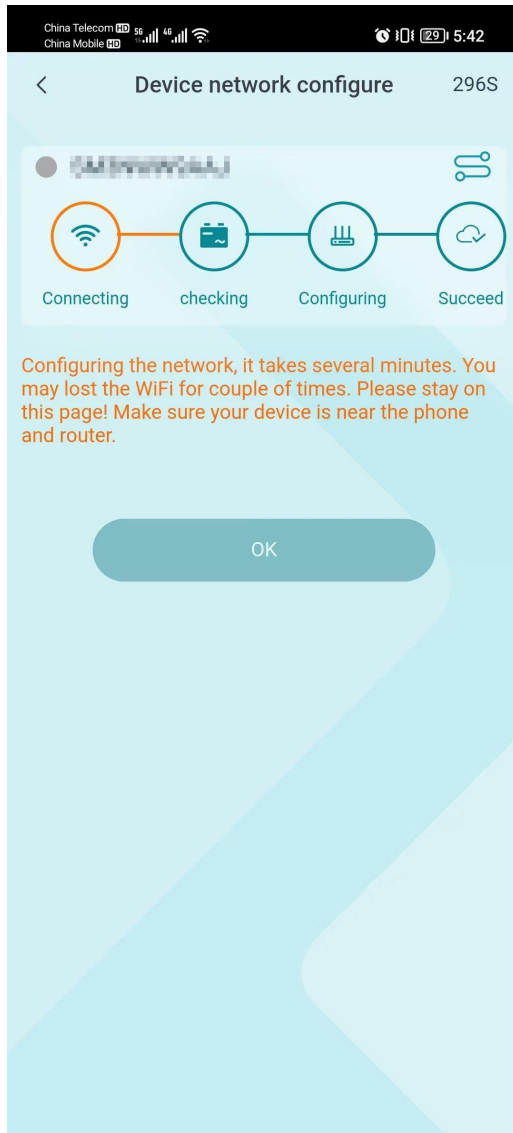


## 4G Network Configuration

**Step 1:** Select **Dongle** at the bottom bar, to go to the **Dongle** page. At the **Dongle** page, tap  at the upper right corner to go to the network configuration page.

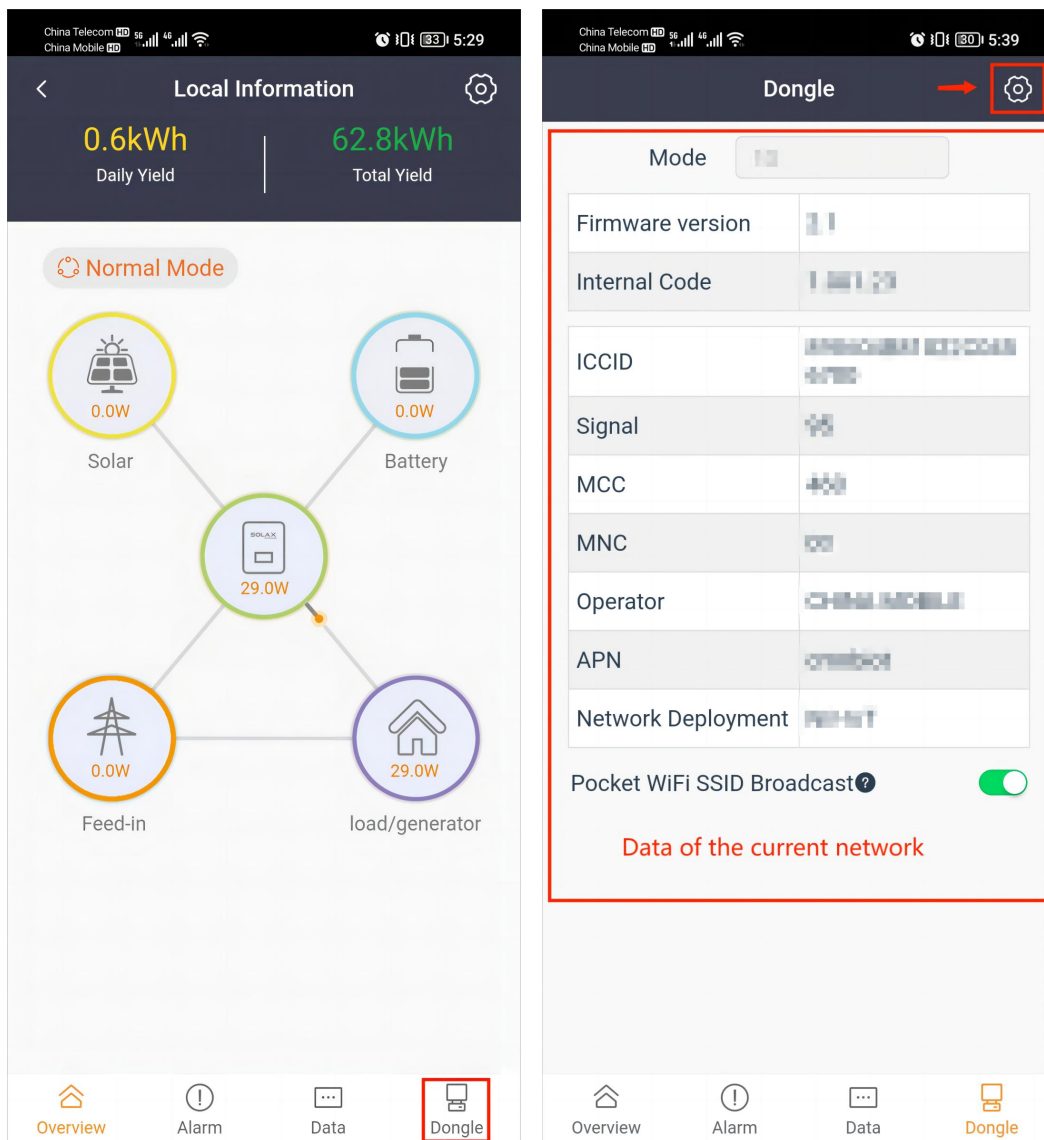

**Step 2:** At the network configuration page, configure the following items:

- (1) Select **4G** as the communication method.
- (2) Select **Manual configuration** as the configuration mode.
- (3) Enter the APN.
- (4) Enter the network deployment.
- (5) Tap **Save**.

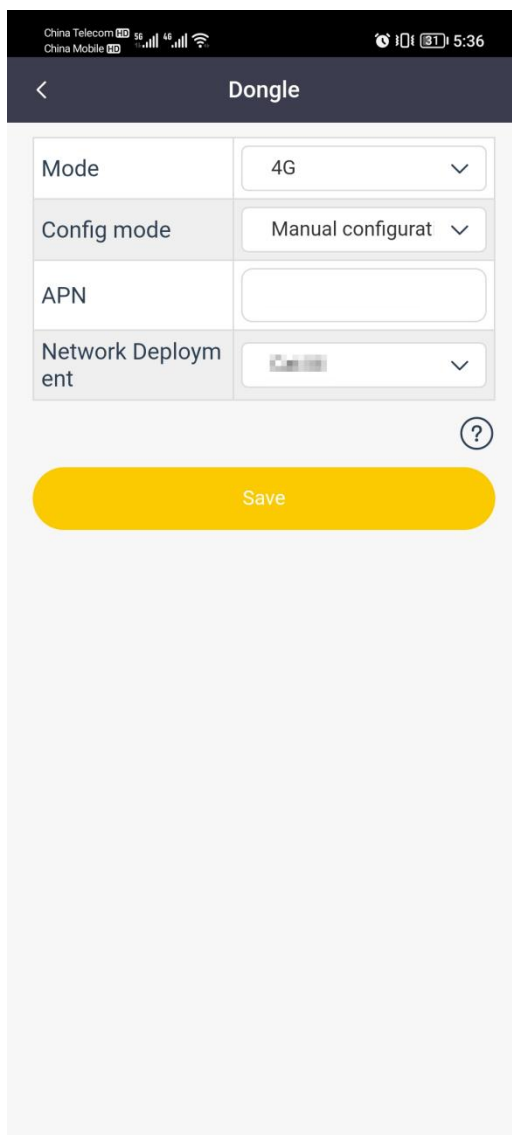


The screenshot shows a mobile application interface for configuring a Dongle. The status bar at the top indicates signal strength for China Telecom and China Mobile, along with the time 5:36. The page title is 'Dongle'. Below the title, there are four configuration items, each with a label and a value field:

Mode	4G
Config mode	Manual configurat
APN	
Network Deployment	China Mobile

Below the configuration items, there is a yellow button labeled 'Save'.

**Step 3:** Wait for several minutes until all indicators (shown in red box) are lit up, which indicates that 4G network configuration is successful. Tap **OK**.

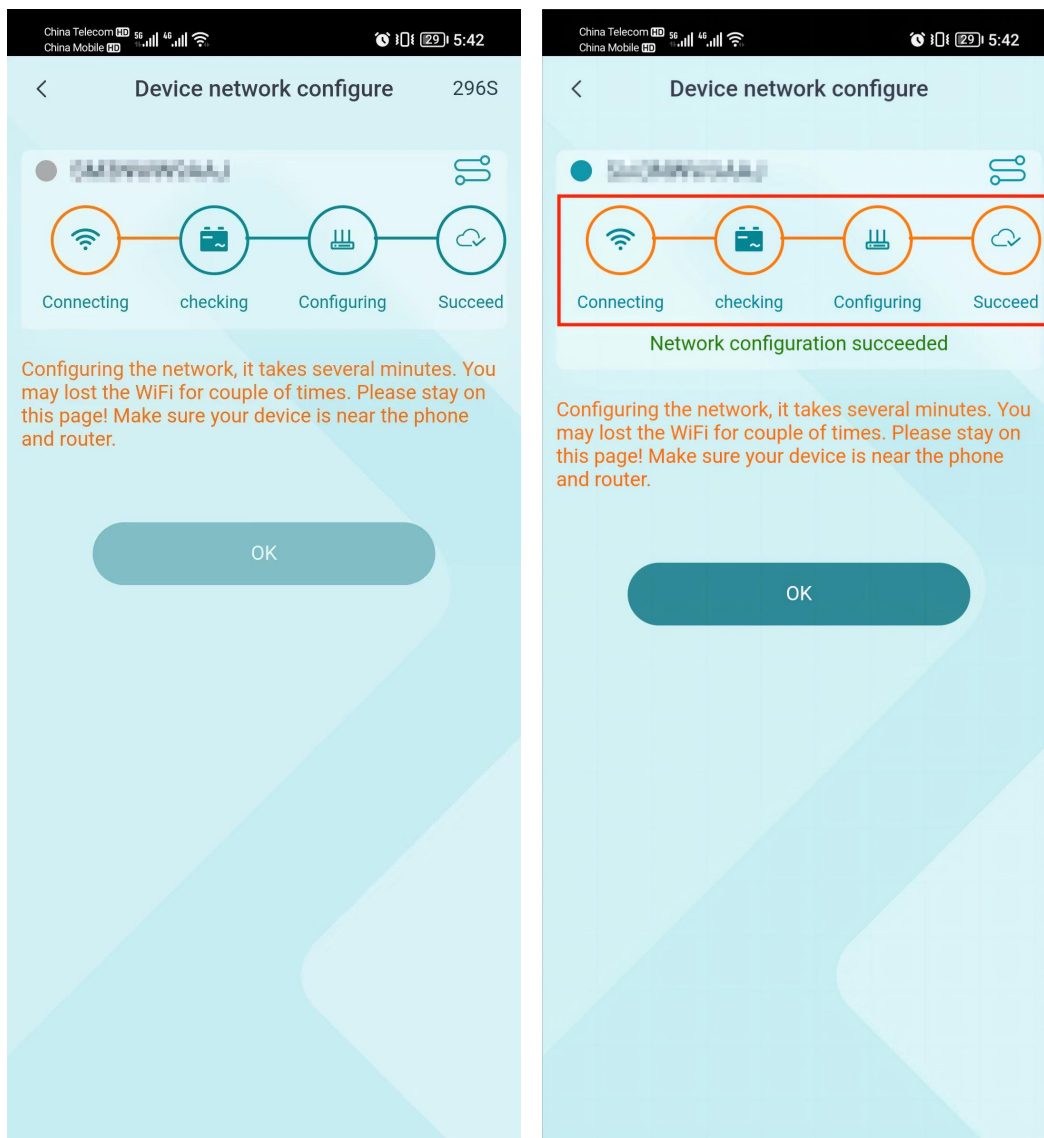

Note: Do not leave any page during networking. Otherwise, the network configuration will exit and fail.



## Personal Settings

Select **Me** at the navigation bar, to go to my personal information page. You can modify personal information, manage a plant, view messages and notifications, and perform personal settings.

- **Basic information:** Tapping the basic information card, you can modify the user name, email, country/region, phone, and password. You can also delete the current account (consider carefully).
- **Plant management:** You can view the plant list; add, delete, or edit a plant; set a default; and set tariff.
- **Message center:** You can view all messages and notifications.
- **Settings:** Set the language, temperature unit, and holidays for your preference.